

TEPPANYAKI

VP230120

Table of contents

INFORMATION FOR USE		8	Cleaning and servicing	7	
1	Safety	2	9	Troubleshooting	8
2	Preventing material damage	3	10	Customer Service	9
3	Environmental protection and saving energy	3	11	Accessories	9
4	Familiarising yourself with your appliance	4	12	Disposal	9
5	Before using for the first time	4	13	INSTALLATION INSTRUCTIONS	10
6	Basic operation	5	13.3	General information	10
7	How it works	5			

1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- To prepare meals and drinks.
- Under supervision. Never leave the appliance unattended when cooking for short periods.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

Do not use the appliance:

- On boats or in vehicles.
- as a room heater.
- With an external timer.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance. Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised. Keep children under the age of 8 years away from the appliance and power cable.

1.4 Safe use

WARNING – Risk of fire!

Hot oil and fat ignites quickly.

- ▶ Never leave hot oil or fat unattended.
- ▶ Never attempt to extinguish a fire using water; instead, switch off the appliance and then cover the flames with a lid or a fire blanket, for example.

The appliance gets very hot and may cause flammable materials to ignite.

- ▶ Never store or use combustible materials (e.g. spray cans or cleaning agents) under the appliance or in its immediate vicinity.
- ▶ Never place flammable objects on or in the appliance.

WARNING – Risk of burns!

Hob guards may cause accidents.

- ▶ Never use hob guards.

WARNING – Risk of scalding!

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

WARNING – Risk of burns!

The appliance remains hot for a long time after it is switched off.

- ▶ Do not touch the appliance while the residual heat indicator is lit.

If the appliance cover is closed, this causes a build-up of heat.

- ▶ Only operate or switch on the appliance when the appliance cover is open.
- ▶ Do not use the appliance cover for keeping warm or setting down.

- ▶ Only close the appliance cover once the appliance has cooled down.

⚠ WARNING – Risk of electric shock!

The insulation on cables of electrical appliances may melt if it touches hot parts of the appliance.

- ▶ Never bring electrical appliance cables into contact with hot parts of the appliance.
- An ingress of moisture may cause an electric shock.
- ▶ Do not use any steam cleaners or high-pressure cleaners to clean the appliance.
- A defective appliance may cause an electric shock.
- ▶ Never switch on a defective appliance.
 - ▶ Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
 - ▶ Call customer service. → *Page 9*
- Improper repairs are dangerous.
- ▶ Repairs to the appliance should only be carried out by trained specialist staff.

- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

⚠ WARNING – Risk of injury!

Heat accumulation occurs when the device cover is closed.

- ▶ Only close the appliance cover when the appliance has cooled down.
- ▶ Never switch the appliance on with the appliance cover closed.
- ▶ Do not rest food on the appliance cover or use it to keep food warm.
- ▶ Remove spilled liquids before opening the appliance cover.

2 Preventing material damage

ATTENTION

Hard or pointed objects may cause scratches or notches to form on the frying surface.

- ▶ Do not allow any hard or pointed objects to fall onto the frying surface.
- ▶ Never cut on the frying surface with a knife.
- ▶ Use the spatula supplied to turn the food.
- ▶ Never hit the frying surface with the spatula.

Non heat-resistant materials will melt on heated hot-plates.

- ▶ Do not use oven protective foil.
 - ▶ Do not use aluminium foil or plastic containers.
- Liquids may damage the appliance.
- ▶ Remove spilled liquids before opening the appliance cover.

3 Environmental protection and saving energy

3.1 Saving energy

If you follow these instructions, your appliance will use less energy.

Stop preheating the appliance once it reaches the required temperature.

- ✓ An extended preheating time increases the energy consumption.

Use the edge of the frying surface to keep food that is already cooked warm, whilst continuing to cook food in the middle.

- ✓ This enables you to use the heat distribution of the frying surface efficiently.

Switch back to a lower temperature early on.

- ✓ Using a temperature that is too high wastes energy.

Select an appropriate temperature.

- ✓ Using a temperature that is too high wastes energy.

Use the residual heat of the Teppan Yaki. If the cooking time is relatively long, you can switch the appliance off 5 to 10 minutes before the cooking time ends.

- ✓ Failing to make the most of any residual heat leads to increased energy consumption.

Product Information according (EU) 66/2014 can be found on the attached appliance pass and online on the product page for your appliance.

3.2 Disposing of packaging


The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

4 Familiarising yourself with your appliance

4.1 Appliance


You can find an overview of the parts of your appliance here.

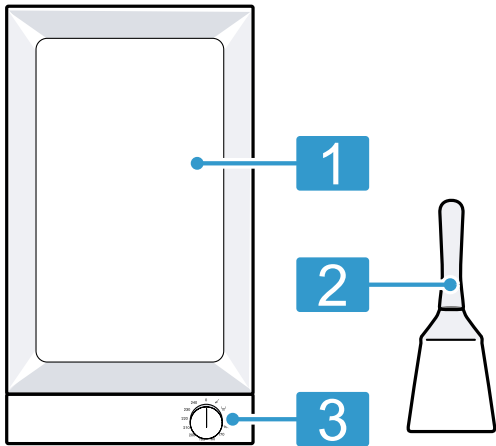

- | | |
|---|--------------------------------------|
| 1 | Frying surface |
| 2 | Spatula, 2 pcs, for turning the food |
| 3 | Temperature setting |

4.2 Control knob

You can use the controls to configure all functions of your appliance and to obtain information about the operating status.

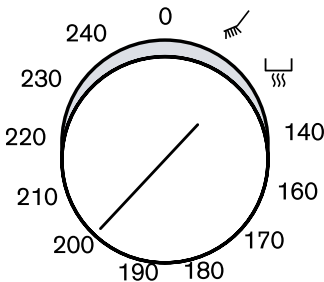

	Cleaning setting
	Keep warm function

4.3 Indicator on the illuminated ring

The control knob has an illuminated ring with various display functions.

Indicator	Name
Off	Appliance OFF
Lights up: Orange	Appliance ON
Lit white but gradually changing to orange	Appliance ON Heat-up indicator
Slowly flashing: Orange	Appliance OFF Residual heat indicator
Flashing alternately: Orange and white	Safety switch-off function, power failure
Quickly flashing: Orange	Appliance fault. Call customer service.

4.4 Function

Teppan Yaki means frying and cooking food according to an old, Japanese tradition. You can cook the food directly on the frying surface without using pots and pans. Use the spatula supplied to turn the food or remove food residues if necessary.

4.5 Residual heat indicator

After switching off the appliance, the illuminated ring on the control knob slowly flashes orange until the appliance has cooled enough for it to be safe to touch. Do not touch the appliance while the residual heat indicator is flashing.

4.6 Automatic switch-off

For your safety, the appliance has a safety shut-off function. Any heating process is switched off after 4 hours if the appliance controls are not used during this time. The heating element also remains switched off after a power cut. The operation indicator flashes.

5 Before using for the first time

Clean the appliance and accessories.


5.1 Heating up the appliance

- ▶ To eliminate the new-appliance smell, heat up the empty appliance at 200 °C for a few minutes. Smoke development and odour development are normal. Ventilate the installation room well.

6 Basic operation

6.1 Switching on the appliance

1. Push in the control knob and turn it to the required temperature.

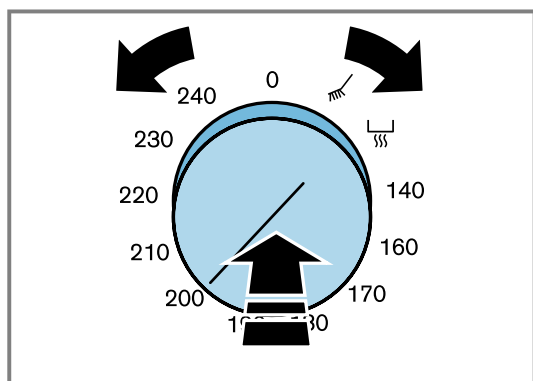

- ✓ The illuminated ring lights up white.
 - ✓ The illuminated ring dims from white to orange while the appliance is heating up.
 - ✓ A signal tone sounds once the set temperature is reached.
2. Use the spatula or a heat-resistant brush (e.g. silicone brush) to spread a little oil or fat evenly over the frying surface.

3. Place the food directly onto the frying surface.
 - ▶ Do not use pots or pans.
4. Use the spatula supplied to turn the food.

6.2 Switching off the appliance

⚠ WARNING – Risk of burns!

The appliance remains hot for a long time after it is switched off.

- ▶ Do not touch the appliance while the residual heat indicator is lit.
- ▶ Turn the control knob to 0.

6.3 Switching on the keep warm function

You can keep food warm on the keep warm function.

- ▶ Turn the control knob to

6.4 Switching on the appliance again after the automatic safety switch-off

1. Turn the control knob to 0.
2. Switch the appliance back on again as usual.

7 How it works

You can find the right settings for different food here as well as helpful comments. We have perfectly tailored these recommendations to your appliance.

7.1 Tips for boiling and frying

- Do not place the food on the appliance until the heating display has gone out. When increasing the temperature between two preparations, do not place the food until the heating display has gone out.
- Use the spatula to press the meat, poultry and fish pieces flat on the frying surface. In order not to destroy fibres, do not turn the food until it is easily detached from the plate. Otherwise, liquid may leak out, causing the food to dry out.

- When roasting, ensure that the pieces of meat, poultry and fish do not touch each other. Otherwise, the food may draw out liquid.
- Do not pierce or cut the meat while cooking it, otherwise meat juice may escape.
- To prevent water and soluble nutrients from escaping, do not add salt to meat, poultry or fish until it has been fried.
- Before frying, you can roll fish fillets in flour so that the fish fillet sticks less firmly.
- Fry fish fillets on the skin side first. If possible, only turn the fish fillet once.
- Only use oils and fats that can be heated to a high temperature and are suitable for frying, e.g. refined plant oils or clarified butter.

7.2 Recommended settings

The setting values are only intended as a guideline because more or less heat will be required depending on the type and condition of the food.

Meat and poultry

Food	Temperature in °C	Cooking time in mins	Comments
Beef steak, medium, 2.5-3 cm	1. Sear at 230-240 °C 2. Continue cooking at 180 °C	1. Fry for 2 mins each side 2. Continue frying for 6-11 mins	E.g. entrecôte, fillet steak, rump steak. The steak is medium when meat juice can be seen on the surface.
Pork neck steak, 2 cm	210-220	15-18	
Veal escalope, breaded, 1.5 cm	190-200	16-20	Use enough oil to prevent the breadcrumb coating from drying out.

Food	Temperature in °C	Cooking time in mins	Comments
Strips of beef or pork, 500-600 g	230-240	6-8	Distribute the pieces of meat evenly; they should not be touching.
Strips of poultry, 500-600 g	180-190	10-12	Distribute the pieces of meat evenly; they should not be touching.
Minced meat, 400 g	230-240	7-8	
Saddle of lamb, medium, 1.5–2.5cm	1. Sear at 200 °C 2. Continue cooking at 160 °C	1. Fry for 2 mins each side 2. Continue frying for 4-6 mins	
Turkey steak, 1.5 cm	190-200	8-15	Turn several times
Poultry liver, 1 cm	200-210	3-5	

Fish and seafood

Food	Temperature in °C	Cooking time in mins	Comments
Fish fillet, 1 cm	210-220	5-7	E.g. perch, cod, basa, haddock, plaice, monkfish, sole, pikeperch
Fish fillet, 2 cm	190-200	7-10	
Fish fillet, 2.5 cm	180-190	15-17	
Salmon steak, 2.5 cm	180-190	15-17	
Salmon steak, 3 cm	160-170	18-20	
Tuna steak, 2.5-3 cm	180-190	17-20	
Prawns, 30 g each	190-200	8-10	
Scallops, 30 g each	190-200	4-8	

Vegetables

Food	Temperature in °C	Cooking time in mins	Comments
Aubergines, sliced, 400 g	180-190	6-8	Salt the aubergines and leave to stand for approx. 30 minutes before frying. Then dry.
Mushrooms, sliced, 400 g	230-240	10-12	
Carrots, julienne, 400 g	170-190	6-8	
Potatoes, boiled, sliced, 400 g	200-220	7-10	
Peppers, cut into strips, 400 g	200-210	4-6	
Courgettes, sliced, 400 g	170-180	4-6	
Onions or leeks, cut into rings, 400 g	170-190	5-7	

Egg-based dishes and desserts

Food	Temperature in °C	Cooking time in mins	Comments
Fried eggs, scrambled eggs, 3-4 eggs	160-180	4-6 mins each side	
Crêpes, 2 pcs	180-190	3-5 mins each side	
Fruit, sliced, 200-300 g	180-190	5-7	E.g. pineapple, apple, mango. Use clarified butter for frying. Sweeten with sugar or honey if desired.
Banana in coconut, 4 halves	180-190	6-9	

Side dishes and miscellaneous

Food	Temperature in °C	Cooking time in mins	Comments
Rice, boiled, 500 g	180-190	5-7	
Pine nuts, 300 g	160	5-7	Turn frequently

Food	Temperature in °C	Cooking time in mins	Comments
Rice noodles, boiled, 400 g	200-220	4-5	
Tofu, 300 g	200-220	3-5	Turn frequently
White bread cubes or croutons, 100 g	160	10-12	Turn frequently to begin with

7.3 Using the with Teppan Yaki with cookware

You can also use the Teppan Yaki to cook with cookware.

- Cooking methods that require little heat supply are suitable for using the cookware with Teppan Yaki. You can heat food quickly on the hob first, if required, before continuing cooking on the Teppan Yaki.

- For melting, defrosting and keeping warm, approx. 140 °C sufficient. 160–200 °C is sufficient for soaking rice and cereals, and for heating small quantities of food.
- Use heat-resistant cookware with a lid. To prevent damage to the stainless steel frame, carefully place the cookware on the heating surface.
- Note that using the Teppan Yaki with cookware is not energy-saving if the cookware is smaller than the heated surface.

8 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

8.1 Cleaning products

You can obtain suitable cleaning products from after-sales service or the online shop.

⚠ **WARNING – Risk of electric shock!**

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

⚠ **WARNING – Risk of burns!**

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

ATTENTION

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Only use glass cleaners, glass scrapers or stainless steel care products if recommended in the cleaning instructions for the relevant part.
- ▶ Wash sponge cloths thoroughly before use.

8.2 Cleaning the cooled frying surface

1. Use the spatula to remove the worst of the residue.
2. Pour a little water (maximum 100 ml) and add a drop of washing-up liquid on the frying surface so that it is just covered.
3. Turn the control knob to .
4. Leave the dirt to soak for approx. 5 to 10 minutes.
5. Use a washing-up brush to clean the frying surface.
6. Mop up and remove the liquid with a soft sponge.
7. Clean stubborn or greasy dirt with the powder detergent or the cleaning gel.

→ "Clean greasy dirt on the frying surface with the "Wiener Kalk" cleaning powder", Page 7

→ "Cleaning burnt-on dirt on the frying surface using the cleaning gel", Page 7

8. Carefully remove any detergent residue.

9. Dry the frying surface with a soft cloth.

Cleaning burnt-on dirt on the frying surface using the cleaning gel

1. Allow the appliance to cool down.
2. Follow the instructions on the packaging for the cleaning gel.
3. Apply the cleaning gel to the dirt and leave it to work for at least 2 hours.
 - ▶ Leave heavy soiling overnight.
4. Rinse the cleaning gel thoroughly from the frying surface.

Clean greasy dirt on the frying surface with the "Wiener Kalk" cleaning powder

1. Follow the instructions on the packaging for the powder detergent.
2. Make a paste from the cleaning powder and water.
3. Wipe with the paste in the brush direction of the surface and clean the frying surface.

8.3 Cleaning the frying surface between two roasting processes

Ice cubes are better suited than water for cleaning the appliance when hot as they cause less splashing and steam.

⚠ **WARNING – Risk of burns!**

Splashing and steam occur when water or ice cubes are poured onto the hot frying surface.

- ▶ Do not lean over the appliance.
- ▶ Maintain a safe distance.

1. Switch off the appliance.
2. Use the spatula to push approx. 4 or 5 ice cubes over the hot frying surface.
3. Use the spatula to remove dirt that has begun to soften.
4. Switch on the appliance.
5. Wait until the set temperature has been reached.
 - ✓ The illuminated ring on the control knob lights up continuously.

6. Place the food on the frying surface.

8.4 Cleaning the control panel

⚠ **WARNING – Risk of electric shock!**

Penetrating moisture may cause an electric shock.

- ▶ Do not use wet sponge cloths.

ATTENTION

Acidic food may discolour the control panel.

- ▶ If acidic substances (e.g. vinegar, ketchup, mustard, marinades) are spilled on the control panel, remove them immediately.

1. Clean using a damp sponge cloth and hot soapy water.
2. Dry with a soft cloth.

8.5 Cleaning the controls

⚠ **WARNING – Risk of electric shock!**

An ingress of moisture can cause an electric shock.

- ▶ Do not detach the control knobs to clean them.

- ▶ Do not use wet sponge cloths.

1. Observe the information regarding the cleaning agents.
→ "Cleaning products", Page 7
2. Clean using a damp sponge cloth and hot soapy water.
3. Dry with a soft cloth.

8.6 Cleaning the spatula

1. Clean the spatula using soapy water and a dish cloth.
2. Clean the spatula in the dishwasher as necessary.

8.7 Cleaning the connection strip

Notes

- Do not use a glass scraper.
- Lemon and vinegar are not suitable for cleaning and may create dull patches.
- ▶ Clean the connection strip with warm soapy water and a soft cloth.

9 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

⚠ **WARNING – Risk of injury!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ If the appliance is defective, call Customer Service.
→ "Customer Service", Page 9

⚠ **WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

9.1 Malfunctions

Fault	Cause and troubleshooting
The appliance is not working.	The mains plug of the power cord is not plugged in. ▶ Connect the appliance to the power supply.
	The circuit breaker in the fuse box has tripped. ▶ Check the circuit breaker in the fuse box.
	There has been a power cut. ▶ Check whether the lighting in your room or other appliances are working.
	Demo mode is activated. ▶ Deactivate the demo mode. → Page 9
The appliance does not heat up. The illuminated ring on the control knob lights up white.	The automatic switch-off → Page 4 has switched off the heating process. 1. Turn the control knob to 0. 2. Switch the appliance back on.
The appliance switches off while operating. The illuminated ring on the control knob is flashing orange and white alternately.	Power failure in the household: Following a power failure, the appliance remains switched off for safety reasons. 1. Turn the control knob to 0. 2. Switch the appliance back on.

Fault	Cause and troubleshooting
The illuminated ring flashes orange.	Electronics fault 1. Turn the control knob to 0. 2. Switch the appliance back on. 3. If the illuminated ring continues flashing after you have switched the appliance back on, call customer service → <i>Page 9</i> .

9.2 Deactivating demo mode

The appliance does not heat up in demo mode. If the illuminated ring on the control knob lights up white after the appliance is switched on, demo mode is activated.

1. Turn the control knob to 0.
2. Disconnect the appliance from the mains power supply.

3. Wait at least 30 seconds.
4. Re-connect the appliance.
5. Turn the control knob to ↙ within the next 3 minutes.
✓ The illuminated ring lights up white.
6. Turn the control knob to 230.
7. Turn the control knob to 0.
✓ Two signal tones confirm that demo mode is deactivated.

10 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Note: Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

You can find the information required as per Regulations (EU) 66/2014 and (EU) 2023/826 online at www.gaggenau.com on the product and service pages for your appliance, in the area of user manuals and additional documents.

10.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. The rating plate is located on the underside of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

11 Accessories

Use original accessories. These have been made especially for your appliance.

Accessories	Function
Spatula (2)	For turning the food

12 Disposal

12.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.
Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

13 Installation instructions


Observe this information when installing the appliance.



mm


13.1 Scope of delivery

After unpacking all parts, check for any damage in transit and completeness of the delivery.

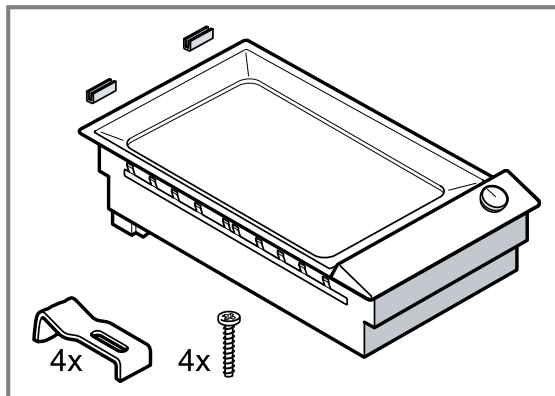

13.2 Appliance dimensions

You will find the dimensions of the appliance here

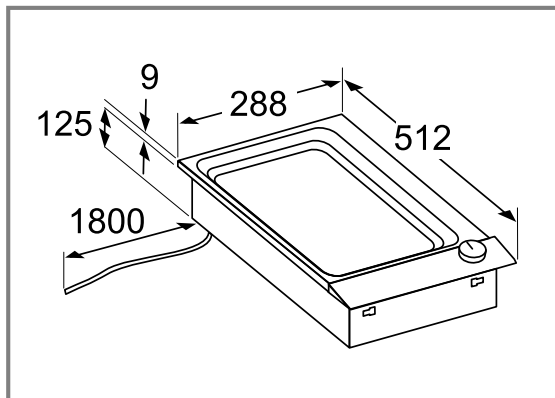

13.3 General information

- Read this instruction manual carefully.
- Only a licensed expert may connect the appliance.
- Switch off the power supply before carrying out any work.
- Never use this appliance in boats or in vehicles.
- Follow the worktop manufacturer's recommendations.

13.4 Instructions for the electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

- Check the household wiring before connecting the appliance. Ensure that there is sufficient fuse protection for the household wiring. The voltage and frequency of the appliance must match the electrical wiring; see the rating plate.
- Ensure that the power supply is properly earthed, that the fuse protection is sufficient and the cable and wiring system in the building is sufficiently dimensioned for the electrical power of the appliance.
- Route the connection cable in such a way that it does not touch the hot casing.
- Use only the connection cable that is supplied with the appliance or is provided by technical customer service.
- This appliance complies with the EC interference suppression regulations.
- The appliance corresponds to protection class 1. You should therefore only use the appliance with a protective earth connection.
- Ensure that contact protection is guaranteed when the appliance is installed.
- Only a qualified electrician may connect appliances without a plug. They are subject to the requirements of the local electricity provider. We recommend installing a residual current circuit breaker (RCCB) in the appliance's power supply circuit.
- Carry out the electrical connection in accordance with the installation instructions. The appliance may be damaged if it is not connected correctly.
- The manufacturer accepts no liability for malfunctions or possible damage resulting from incorrect electrical wiring.
- We recommend installing a socket equipped with protective-earth contacts behind the appliance, approximately 70 cm above the floor, in accordance with regulations. Only a qualified electrician may install a protective contact socket in accordance with the relevant regulations.

13.5 Safe installation

Follow these safety instructions when installing the appliance.

⚠ WARNING – Risk of electric shock!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

It must always be possible to disconnect the appliance from the electricity supply. The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ The mains plug of the mains power cable must be easily accessible after installation of the appliance.

- ▶ If this is not possible, an all-pole isolating switch must be integrated into the permanent electrical installation according to the conditions of overvoltage category III and according to the installation regulations.
- ▶ The permanent electrical installation must only be wired by a professional electrician. We recommend installing a residual-current circuit breaker (RCCB) in the appliance's power supply circuit.

⚠ **WARNING – Risk of injury!**

Components inside the appliance may have sharp edges.

- ▶ Wear protective gloves.

⚠ **WARNING – Risk of electric shock!**

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

13.6 Information about the installation room

For safe operation, observe the following information regarding the installation area.

- Install the appliance in accordance with the installation diagram.
- Ensure that the wall behind the appliance is made of non-combustible material.

13.7 Installation accessories

Here, you can find an overview of the installation accessories.


Use the accessories only as specified. The manufacturer shall accept no liability if you use the accessories incorrectly.

Accessories	Order number
Appliance cover, black	VD200020
Connecting strip, stainless steel	VV200010
Connecting strip, black	VV200020

13.8 Combining multiple appliances

Requirement: You need a suitable connection strip to combine several Vario appliances. You can obtain the connection strip as an optional accessory.

1. When making the unit cut-out, allow extra space for the connecting strip between the appliances.
 - ▶ Observe the installation instructions for the connection strip.

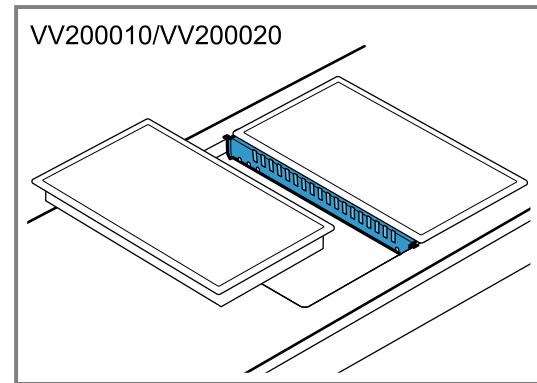

2. If required, install the appliances in individual cut-outs.
 - ▶ Maintain a bar width of at least 40 mm between the individual cut-outs.

13.9 Installing the appliance cover


You can obtain a suitable appliance cover as an optional accessory.

- ▶ Secure the appliance cover to the appliance before installing it.
 - ▶ Follow the installation instructions for the appliance cover.


13.10 Preparing the unit

Requirements


- The fitted units are heat-resistant up to 90 °C.
 - The worktop is level, horizontal and stable.
1. Follow the instructions on combining several appliances.
 - "Combining multiple appliances", Page 11
 2. Ensure that the stability of the fitted unit is guaranteed after the cut-outs have been made.
 3. Ensure that the thickness of the worktop corresponds to the required minimum thickness.

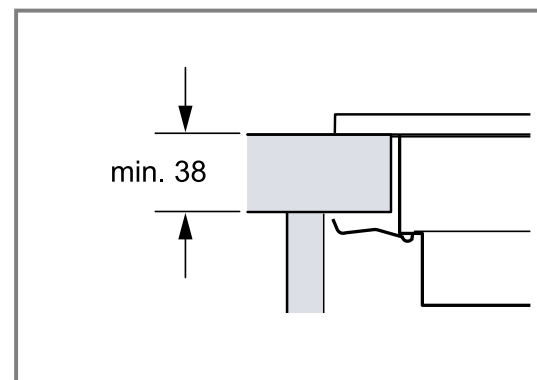


4. Take the distance from the upper edge of the worktop to the lower edge of the appliance into account.

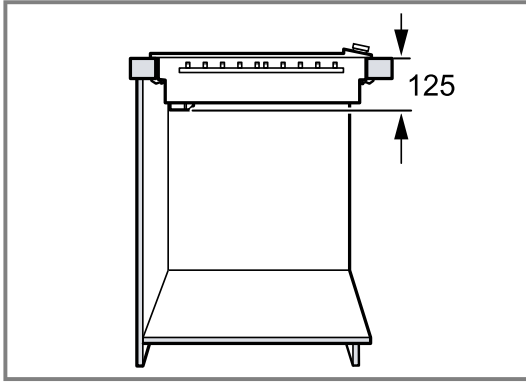

5. Make the unit cut-out in the worktop for one or more Vario appliances in accordance with the installation drawing.

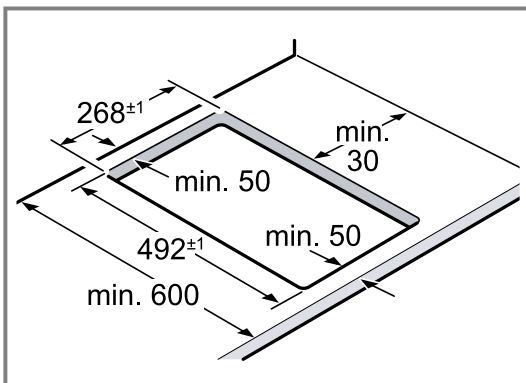

6. Ensure that the angle of the cut surface to the worktop is 90°.

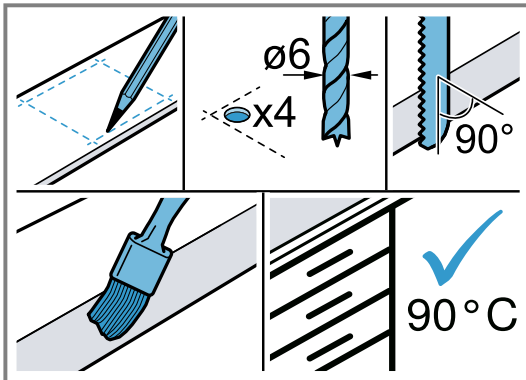

7. Remove dust and residues from the cut-out work. Seal the cut surfaces so that they are heat-resistant and waterproof.
8. Ensure that the minimum clearance from the bottom of the appliance to furniture parts is 10 mm.
9. Ensure contact protection.
- ▶ If the underside of the appliance can be touched after installation, install an intermediate floor which can only be removed with a tool.
 - ▶ Ensure that the minimum clearance between the intermediate floor and the underside of the appliance is 10 mm.


13.11 Installing the appliance

⚠ WARNING – Risk of electric shock!


If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.


1. Follow the instructions for the appliance cover.
→ "Combining multiple appliances", Page 11
2. To install the appliance without an appliance cover, seal the openings on the back of the appliance using the cover caps supplied.

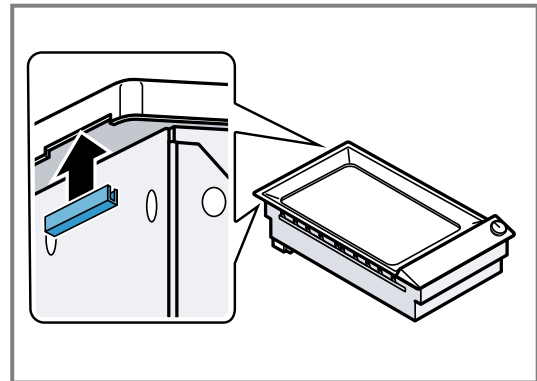

3. Keeping the appliance level, insert it into the unit cut-out.
4. Push the appliance firmly into the unit cut-out from above.
 - ▶ Ensure that the appliance is firmly positioned in the unit cut-out and does not move.
 - ▶ If the width of the cut-out is at the upper tolerance limit, secure a bar at the sides of the cut-out in each case, if necessary.

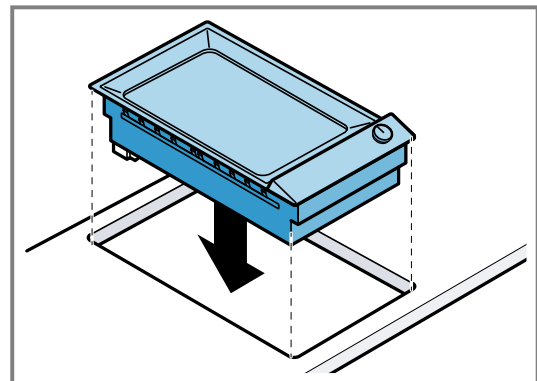

5. Secure the appliance from below using the 4 enclosed brackets at the front and back.

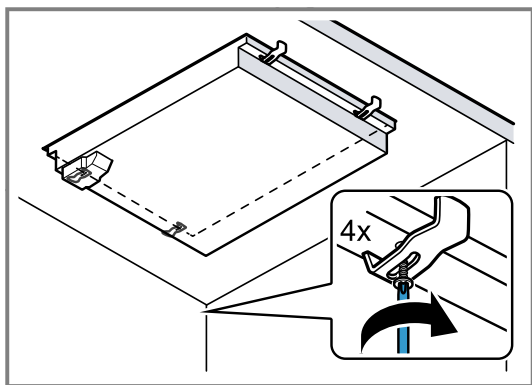

13.12 Removing the appliance

ATTENTION

Tools may damage the appliance frame.

► Do not prise out the appliance from above.

1. Disconnect the appliance from the power supply.
2. Push out the appliance from below.



A series of horizontal lines for writing, starting from the top right of the page and extending downwards to the bottom of the page.



A series of horizontal lines for writing, starting from the top right of the page and extending downwards to the bottom of the page.

The difference is Gaggenau

gaggenau.com

BSH Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München, GERMANY
www.gaggenau.com

Valid within Great Britain:
Imported to Great Britain by
BSH Home Appliances Ltd.
Grand Union House
Old Wolverton Road
Wolverton, Milton Keynes
MK12 5PT
United Kingdom



9001866638 (050311) REG25
en