

FRIDGE-FREEZER COMBINATION

שילוב של מקרר ומקפיא

RVY497..

GAGGENAU





תוכן למצוא מידע והסברים נוספים באינטרנט. סרקו את קוד ה-QR בעמוד השער.

תוכן העניינים

15	7.1 ביצוע הפעלה ראשונית	3	1 בטיחות
16	8 הפעלה בסיסית	3	1.1 הנחיות כלליות
16	8.1 הפעלת המכשיר	3	1.2 שימוש בהתאם ליעוד
16	8.2 עצות להפעלה	4	1.3 הגבלות על קבוצת המשתמשים
16	8.3 כיבוי המכשיר	4	1.4 הובלה בטוחה
16	8.4 קביעת הטמפרטורה	4	1.5 התקנה בטוחה
16	8.5 הגדרת אחסון במיכל האחסון	5	1.6 שימוש בטוח
16	בקירור	7	1.7 מכשיר שניזוק
16	8.6 נעילת לחצנים	8	2 מניעת נזק רכוש
17	9 הגדרות בסיסיות	3	3 שמירה על הסביבה וחיסכון
17	9.1 שינוי ההגדרות הבסיסיות	8	באנרגיה
17	9.2 סקירת ההגדרות הבסיסיות	8	3.1 השלכת האריזה
19	10 פונקציות נוספות	8	3.2 חיסכון בחשמל
19	10.1 קירור מהיר	9	4 התקנה וחיבור
19	10.2 הקפאה מהירה אוטומטי	9	4.1 תכולת האריזה
20	10.3 הקפאה מהירה ידנית	9	4.2 קריטריונים למקום ההצבה
20	10.4 מצב חופשה	9	4.3 התקנת המכשיר
20	10.5 מנגנון סיוע לפתיחת הדלת	9	4.4 הכנת המכשיר לשימוש הראשון
21	10.6 מצב מנוחה	9	4.5 חיבור המכשיר למי השתייה
21	11 התראה	10	4.6 חיבור המכשיר לחשמל
21	11.1 התראת דלת	11	5 הכרת המכשיר שלכם
21	11.2 התראת טמפרטורה	11	5.1 המכשיר
21	Home Connect 12	12	5.2 לוח הבקרה
22	12.1 התקנת Home Connect	13	6 אביזרים פנימיים
22	12.2 התקנת עדכון לתוכנת Home Connect	13	6.1 מדף
22	12.3 איפוס ההגדרות של Home Connect	13	6.2 תא אחסון
22	12.4 אבחון מרחוק	13	6.3 מיכל אחסון בקירור
23	12.5 אבטחת נתונים	14	6.4 מיכל הקפאה נשלף
23	12.6 מצב החיבור ל-Home Connect	14	6.5 מכל תלוי למזון קפוא
23	13 הגדרות שירות	14	6.6 מדף דלת
23	13.1 שינוי הגדרות שירות	14	6.7 מיכל קוביות קרח
23	13.2 סקירה כללית של הגדרות השירות	14	6.8 מצלמה
23	13.3	14	6.9 מסנן ריחות
24	14 תא קירור	14	6.10 אביזרים
			7 לפני הפעלה הראשונה של המכשיר
		15	

28	18.3 הפשרה בתא ההקפאה
28	19 ניקוי ותחזוקה
28	19.1 הוראות טיפול למשטחי בירוסטה ...
28	19.2 הכנת המכשיר לניקוי
28	19.3 ניקוי המכשיר
29	19.4 ניקוי המצלמה
29	19.5 ניקוי פקק המעקף
29	19.6 הסרת אביזרים
30	19.7 החלפת מסנן הריחות
30	20 תיקון תקלות
35	20.1 הפסקת חשמל
35	21 אחסון והשלכה לאשפה
35	21.1 הוצאת המכשיר משימוש
35	21.2 השלכת מכשיר הישן
35	22 שירות לקוחות
	22.1 מספר המוצר (E-Nr), ומספר
	הייצור (FD) ומספר הסדרה (Z-)
36	(Nr)
36	23 מפרטים טכניים
	23.1 מידע לגבי תכנה פתוחה ותכנת קוד
36	פתוח
36	24 הצהרת תאימות

14.1	עצות לאחסון מוצרי מזון בתא
24	הקירור
14.2	אזורי קירור בתא הקירור
25	15 מיכל אחסון בקירור
15.1	המלצות אחסון במיכל האחסון
25	בקירור
15.2	זמני אחסון במיכל האחסון בקירור
25	ב- 0°C (32°F)
25	16 תא הקפאה
16.1	יכולת הקפאה
16.2	ניצול מרבי של נפח תא ההקפאה .
16.3	עצות לאחסון מוצרי מזון בתא
26	ההקפאה
16.4	עצות להקפאת מוצרי מזון טריים ..
16.5	עמידות המזון כשהוא מוקפא
26	ב- 18°C (0°F)
16.6	שיטות להפשרת מזון קפוא
26	17 מערכת מים
17.1	פקק מעקף
17.2	מייצר קוביות קרח
28	18 הפשרה
18.1	הפשרה בתא הקירור
18.2	הפשרה במיכל אחסון בקירור

1 בטיחות

שימו לב להוראות הבטיחות להלן.

1.1 הנחיות כלליות

- קראו בקפידה את הוראות ההפעלה.
- שמרו על הוראות ההפעלה וכן על מסמכי המוצר במקום בטוח לעיון עתידי או עבור הבעלים הבאים.
- אל תחברו את המכשיר אם התגלו נזקי הובלה.

1.2 שימוש בהתאם לייעוד

- יש להשתמש במכשיר רק:
- לצינון ולהקפאת מזון ולניפוק קוביות קרח.
- במשק בית פרטי ובחדרים סגורים בסביבה הביתית.
- עד לגובה של 2000 מטר מעל פני הים.

1.3 הגבלות על קבוצת המשתמשים

מכשיר זה יכול להיות מופעל ע"י ילדים מעל מגיל 8 וע"י אנשים בעלי מגבלות פיסיות, חושיות או מנטליות או אנשים חסרי נסיון ו/או ידע, כאשר הם נמצאים תחת פיקוח או אם עברו הדרכה בקשר להפעלה בטוחה של המכשיר והבינו את הסכנות הנובעות ממנה.
אין לאפשר לילדים לשחק במכשיר.
אסור לילדים לבצע ניקיון ותחזוקה ללא השגחה.
לילדים החל מגיל 3 ומתחת לגיל 8 מותר להכניס ולהוציא מוצרים מן המקרר / המקפיא.

1.4 הובלה בטוחה

⚠ אזהרה – סכנת מעידה!

המכשיר כבד מאוד, מרכז הכובד שלו ממוקם בחלקו העליון והוא עלול להתהפך.
 ◀ חובה לשנע את המכשיר על ידי שני אנשים או יותר.
 ◀ יש להוריד את המכשיר מהמשטח אך ורק כשהוא מוכן להתקנה.
 ◀ יש להשאיר את הדלתות והמגירה סגורות, עד שהמכשיר מאובטח בגומחת ההתקנה.

⚠ אזהרה – סכנת פציעה!

משקלו הגבוה של המכשיר עלול לגרום לפציעות בזמן ההרמה.
 ◀ אסור להרים את המכשיר לבד.

1.5 התקנה בטוחה

⚠ אזהרה – סכנת התחשמלות!

התקנה לא מקצועית היא מסוכנת.
 ◀ חברו והפעילו את המכשיר רק בהתאם למפרט המצוין בלוחית הדירוג.
 ◀ חברו את המכשיר לאספקת חשמל עם זרם חלופי רק דרך שקע המותקן כהלכה עם הארקה.
 ◀ יש להתקין כהלכה את מערכת מוליך ההגנה של ההתקנה החשמלית הביתית.
 ◀ אין לצייד את המכשיר בהתקן כיבוי חיצוני, לדוגמה, טיימר או שלט רחוק.
 ◀ כאשר המכשיר הורכב, על התקע של כבל החשמל להיות נגיש, או אם גישה חופשית בלתי אפשרית, יש לשלב בהתקנה החשמלית הקבועה מפסק בידוד בהתאם לכללי ההתקנה.
 ◀ בעת התקנת המכשיר, בדקו שכבל החשמל לא נתפס או לא נידוק.
 בידוד פגום של הכבל החשמלי מהווה סכנה.
 ◀ אין להביא את הכבל החשמלי במגע עם מקורות חום.

⚠ **אזהרה – סכנת פיצוץ!**

כשפתחי האוורור של המכשיר סגורים, עלולה להיווצר תערובת גז-אוויר דליקה אם קיימת דליפה במעגל הקירור.

◀ אין לסגור את פתחי האוורור בגוף המכשיר או בגומחת ההתקנה.

⚠ **אזהרה – סכנת דליקה!**

כבל חשמלי מוארך ומתאם לא מורשים מהווים סכנה.

◀ אין להשתמש בכבל מאריך או במפצל שקעים.

◀ מותר להשתמש רק במתאם ובכבלי חשמל המורשים ע"י היצרן.

◀ כאשר כבל החשמל קצר מדי ואין כבל חשמל ארוך יותר, צרו קשר עם חשמלאי

כדי להתאים את ההתקנה בבית.

מפצל שקעים או יחידות ניידות לאספקת חשמל עלולים להתחמם ולגרום לדליקה.

◀ אין למקם מפצל שקעים או יחידות ניידות לאספקת חשמל בגב המכשיר.

⚠ **אזהרה – סכנת מעידה!**

המכשיר כבד מאוד, מרכז הכובד שלו ממוקם בחלקו העליון והוא עלול להתהפך.

◀ חובה להתקין את המכשיר על ידי שני אנשים או יותר, מיד לאחר שהנעילה

שלו הוסרה והוא הורד מהמשטח.

◀ אבטחו את המכשיר באמצעות התושבת המצורפת למניעת התהפכות.

◀ יש להשגיח על המכשיר בעת ההתקנה.

⚠ **זהירות – סכנת היחתכות!**

בעת מגע, שוליים חדים של המכשיר עלולים לגרום לפציעות חתך.

◀ לבשו כפפות הגנה.

1.6 שימוש בטוח

⚠ **אזהרה – סכנת התחשמלות!**

חדירת לחות עלולה לגרום להתחשמלות.

◀ מותר להשתמש במכשיר רק בחדרים סגורים.

◀ אין לחשוף את המכשיר לחום וללחות גבוהים.

◀ אין לנקות את המכשיר במכשיר ניקוי בקיטור או בלחץ גבוה.

⚠ **אזהרה – סכנת חנק!**

ילדים עלולים לכסות את הראש באריזות ולהילכד ולהיחנק בהן.

◀ הריחקו את האריזות מהילדים.

◀ אין להתיר לילדים לשחק בחומרי האריזה.

ילדים עלולים לשאוף או לבלוע חלקים קטנים ולהיחנק.

◀ יש להרחיק חלקים קטנים מילדים.

◀ אין להתיר לילדים לשחק בחלקים קטנים.

⚠ אזהרה – סכנת פיצוץ!

- בדק למעגל הקירור עלול לגרום לדליפת חומר קירור דליק ולפיצוץ.
- אין להשתמש במכשירים מכניים או באמצעים אחרים מאלה המומלצים בידי היצרן כדי להאיץ את תהליך ההפשרה.
- חילוץ של מזון שקפא ונתקע ייעשה בעזרת מכשיר קהה כמו כף עץ.
- מוצרים המכילים חומרים דליקים או נפצים עלולים להתפוצץ, למשל מיכלי תרסיס.
- אין לאחסן במכשיר מוצרים המכילים גזים דליקים וחומרים נפצים.

⚠ אזהרה – סכנת דליקה!

- מכשירי חשמל בתוך המכשיר עלולים לגרום לדליקה, למשל תנורי חימום או מייצרי קרח חשמליים.
- אין להפעיל מכשירי חשמל בתוך המכשיר.

⚠ אזהרה – סכנת פציעה!

- מיכלים שבהם משקאות מוגזים עלולים להתפוצץ.
- אין לאחסן מכלים עם משקאות מוגזים במיכל האחסון בקירור או בתא המתכוון לטמפרטורה מתחת 1°C (34°F).
- אין לאחסן בתא ההקפאה מיכלים עם משקאות מוגזים.
- סכנת לפציעות עיניים עקב דליפה של חומר קירור דליק וגזים רעילים.
- אין לפגוע בצינורות מעגל הקירור והבידוד.

⚠ אזהרה – סכנת כוויות קור!

- מגע עם מזון קפוא ומשטחים קפואים עלול לגרום לכוויות קור.
- אין להכניס לפה מזון קפוא מיד לאחר שהוצא מתא ההקפאה.
- הימנעו ממגע ממושך של העור במזון הקפוא, בקרח ובמשטחים בתא ההקפאה.

⚠ זהירות – סכנה לנזק בריאותי!

- כדי להימנע מזיהום המזון, פעלו לפי ההוראות שלהלן.
- אם הדלת נשארת פתוחה זמן רב, הטמפרטורה בתאי המכשיר עלולה לעלות משמעותית.
- נקו באופן קבוע את המשטחים ומערכות הניקוז הנגישות העלולים לבוא במגע עם מזון.
- אחסנו במקרר בשר ודגים בכלים מתאימים כך שהם לא יגעו במוצרי מזון אחרים או יטפטפו עליהם.
- אם המקרר/המקפיא עומד ריק במשך זמן רב, כבו את המכשיר, הפשירו אותו, נקו אותו והשאירו את הדלת פתוחה כדי למנוע היווצרות עובש.

חלקים במכשיר העשויים מתכת או בעלי מראה מתכתי עשויים להכיל אלומיניום. כאשר מזונות חומציים באים במגע עם אלומיניום, יוני אלומיניום עלולים לחדור למזון.
 ◀ אין לצרוך מזון מזוהם.

1.7 מכשיר שניזוק

⚠ אזהרה – סכנת התחשמלות!

- ◀ מכשיר פגום או חיבור חשמלי פגום מהווים סכנה.
- ◀ לעולם אין להפעיל מכשיר שניזוק.
- ◀ אין למשוך את הכבל החשמלי, כדי לנתק את המכשיר מהחשמל. שלפו תמיד את התקע של כבל החיבור לחשמל.
- ◀ שלפו מיד את הכבל החשמלי אם הוא או המכשיר ניזוקו, או נתקו את הנתך בתיבת הנתיכים וסגרו את ברד המים.
- ◀ פנו לשירות הלקוחות. ← עמוד 35
- ◀ תיקונים לא מקצועיים עלולים להיות מסוכנים.
- ◀ רק בעלי מקצוע מיומנים רשאים לבצע תיקונים במכשיר.
- ◀ מותר להשתמש רק בחלקי חילוף מקוריים לצורך תיקון המכשיר.
- ◀ במקרה של נזק לכבל חיבור החשמל או לכבל החשמל של המכשיר, יש להחליפו בכבל חיבור חשמל או בכבל חיבור חשמל מיוחד, אותו ניתן להשיג אצל היצרן או אצל שירות הלקוחות שלו.

⚠ אזהרה – סכנת דליקה!



- ◀ במקרה של נזק לצינורות, נזל קירור דליק וגזים מזיקים עלולים להיפלט ולהתלקח.
- ◀ הרחיקו מקורות אש והצתה מהמכשיר.
- ◀ אווררו את החדר.
- ◀ כבו את המכשיר.
- ◀ נתקו את המכשיר מרשת החשמל או כבו את הנתך בתיבת הנתיכים.
- ◀ התקשרו לשירות הלקוחות. ← עמוד 35

2 מניעת נזקי רכוש

שימו לב

משקלו הכבד של המכשיר או הטיית גלגלי המכשיר עלולים להזיק לרצפה בעת הזזת המכשיר.

- ▲ יש להוביל את המכשיר באמצעות עגלת יד להובלת מטען.
- ▲ בעת הזזת המכשיר הגנו על הרצפה ואל תובילו אותו בתנועת זיגזג.
- ▲ כאשר דלת המכשיר סגורה, גם מסילת הדלת אמורה להיות סגורה (מיושרת לקצה הדלת), אחרת עלול להיגרם נזק.
- ▲ לעולם אין לפתוח ידנית את מסילת הדלת.
- ▲ אם מסילת הדלת נפתחת, סובבו אותה כדי שתיסגר (מיושרת לקצה הדלת) לפני סגירת דלת המכשיר.

שימוש בבסיס, במגירות או בדלתות המכשיר כמשטח ישיבה או טיפוס עלול לגרום נזק למכשיר.

- ▲ אין לדרוך או להישען על הבסיס, המגירות או הדלתות.
- ▲ לחץ מים נמוך מדי או גבוה מדי עלול להשפיע על תפקוד המכשיר.
- ▲ ודאו שלחץ המים במערכת אספקת המים הוא לפחות 200 kPa (2 בר) ולא יותר מ-800 kPa (8 בר).
- ▲ אם לחץ המים חורג מהערך המקסימלי שנקבע, יש להתקין שסתום להקטנת לחץ בין מחבר מי השתייה לבין צנרת המכשיר.
- ▲ צינורות מים שבידוקו או ששנונו עלולים לגרום לנזקי רכוש ולנזק למכשיר.
- ▲ אין לקפל, למעוך, לשנות או לחתוך צינורות מים.
- ▲ מותר להשתמש רק בצינורות המים שסופקו עם המכשיר או בצינורות חלופיים מקוריים.
- ▲ אין להשתמש שוב בצינורות מים משומשים.
- ▲ לעולם אין למשוך בצינור המים בגב המכשיר.
- ▲ לכולן של שמן או שומן על חלקי פלסטיק ואטמי דלתות עלול לגרום להם להתייבש ולהתפורר.
- ▲ שמרו על חלקי הפלסטיק ואטמי הדלת נקיים משמן ומשומן.

חלקים במכשיר העשויים מתכת או הנראים מתכתיים עשויים להכיל אלומיניום. במגע עם מזונות חומציים, האלומיניום מחליד ומשנה את צבעו.

- ▲ יש לאחסן במכשיר מוצרי מזון ארוזים בלבד.

ניקוי אביזרים וחלקים של המכשיר במדיח הכלים עלול לגרום להם להתעוות או לשנות את צבעם.

- ▲ לעולם אין לנקות חלקים ואביזרים במדיח הכלים.

3 שמירה על הסביבה וחיסכון באנרגיה

3.1 השלכת האריזה

כל חומרי האריזה ידידותיים לסביבה וניתנים למחזור.

- ▲ מיינו את הרכיבים השונים בנפרד לפי סוג.

3.2 חיסכון בחשמל

אם תקפידו על הנחיות אלה, המכשיר יצרוך פחות חשמל.

בחירת מקום ההצבה

- הגנו על המכשיר מפני קרינת שמש ישירה.
- הציבו את המכשיר במרחק גדול ככל האפשר מגופי חימום, כיריים ומקורות חום אחרים:
 - שמרו על מרחק של 30 מ"מ מכיריים חשמליים או מכיריים גז.
 - שמרו על מרחק של 300 מ"מ מתנורי נפט או פחם.
- לעולם אין לכסות או לחסום את פתחי האוורור החיצוניים.

שימוש חסכוני באנרגיה

הערה: סידור אביזרי המכשיר אינו משפיע על צריכת האנרגיה שלו.

- פתחו את המכשיר לזמן קצר בלבד, וסגרו אותו היטב.
- לעולם אין לכסות או לחסום את פתחי האוורור הפנימיים או את פתחי האוורור החיצוניים.

כמות חומר הקירור מצוינת על לוחית הנתונים.

← "המכשיר", איור 1/16 עמוד 12

משקל המכשיר יכול להגיע בהתאם לדגם עד ל-225 ק"ג.

הרצפה שעליה ניצב המכשיר צריכה להיות יציבה מספיק כדי לשאת את משקלו.

מכשיר קירור זה מיועד לשימוש בטמפרטורות סביבה של 10°C עד 43°C .

המכשיר מסוגל לפעול באופן תקין בטווח הטמפרטורות המותרות בחדר.

אם מפעילים המכשיר בחדר שהטמפרטורה בו נמוכה יותר, לא ייגרמו נזקים למכשיר עד לטמפרטורת חדר של 5°C .

4.3 התקנת המכשיר

◀ התקינו את המכשיר על פי הוראות ההתקנה המצורפות.

4.4 הכנת המכשיר לשימוש הראשון

1. הוציאו את דפי המידע.

2. הסירו את יריעות ההגנה ומגני ההובלה, לדוגמה פסי הדבקה וקרטונים.

3. בקו את המכשיר בפעם הראשונה.
← עמוד 28

4.5 חיבור המכשיר למי השתייה

דרישות

◀ בחיבור המים מותקן ברד זווית, והוא נגיש לאחר התקנת המכשיר.

◀ חיבור המים נבדק, והמים הם באיכות מי שתייה.

1. הוציאו את מי השתייה מהחיבור למי השתייה של התשתית הביתית, עד שאין משקעים או עכירות.

אם מי השתייה עדיין עכורים או מכילים משקעים, התקינו מערכת סינון מים חיצונית.

2. התקינו את צינור המים לפי הוראות ההתקנה המצורפות למכשיר.

- ◀ הובילו את מוצרי המזון שרכשתם בצידינית והכניסו אותם במהירות למכשיר.
- ◀ הביחו למוצרי מזון ומשקאות חמים להתקרר לפני שאתם מכניסים אותם למכשיר.
- ◀ כדי לנצל את הקור של פריטי מזון קפואים, הפשירו אותם בתא הקירור.
- ◀ השאירו תמיד מעט רווח בין מוצרי המזון והדופן האחורית.
- ◀ שאבו את האבק שמצטבר על סורגי האזור החיצוניים.

4 התקנה וחיבור

4.1 תכולת האריזה

לאחר הוצאת כל החלקים מהאריזה בדקו שלא נגרם נזק כלשהו בעת ההובלה ושכל החלקים נמצאים.

במקרה של תלונות, פנו אל הסוכן או אל שירות הלקוחות ← עמוד 35.

המשלוח כולל את החלקים הבאים:

- ◀ ציוד ואביזרים¹
- ◀ חומרים להתקנה
- ◀ הוראות התקנה
- ◀ הוראות הפעלה
- ◀ רשימת מוקדי שירות לקוחות
- ◀ כתב אחריות²
- ◀ תווית אנרגיה
- ◀ מידע לגבי צריכת החשמל והרעשים
- ◀ מידע על Home Connect

4.2 קריטריונים למקום ההצבה

⚠ אזהרה

סכנת פיצוץ!

אם המכשיר עומד בחדר קטן, ייתכן שבמקרה של דליפת חומר קירור תיווצר תערובת גז-אוויר נפוצה.

◀ הציבו את המכשיר רק בחדר בגודל של לפחות 1 מ"ק לכול 8 גרם חומר קירור.

¹ בהתאם לאבזור המכשיר

² לא בכל המדינות

4.6 חיבור המכשיר לחשמל

1. יש להכניס את התקע של כבל החשמל למכשיר.

2. יש להכניס את תקע של כבל חשמל של המכשיר לשקע בקרבת המכשיר. נתוני החיבור של המכשיר מצוינים בלוחית הדגם.


← "המכשיר", איור 1/16 עמוד 12

3. בדקו שהתקע הוכנס במלואו.
✓ המכשיר מוכן כעת לפעולה.

5 הכרת המכשיר שלכם

5.1 המכשיר

כאן תוכלו למצוא סקירה של רכיבי המכשיר.

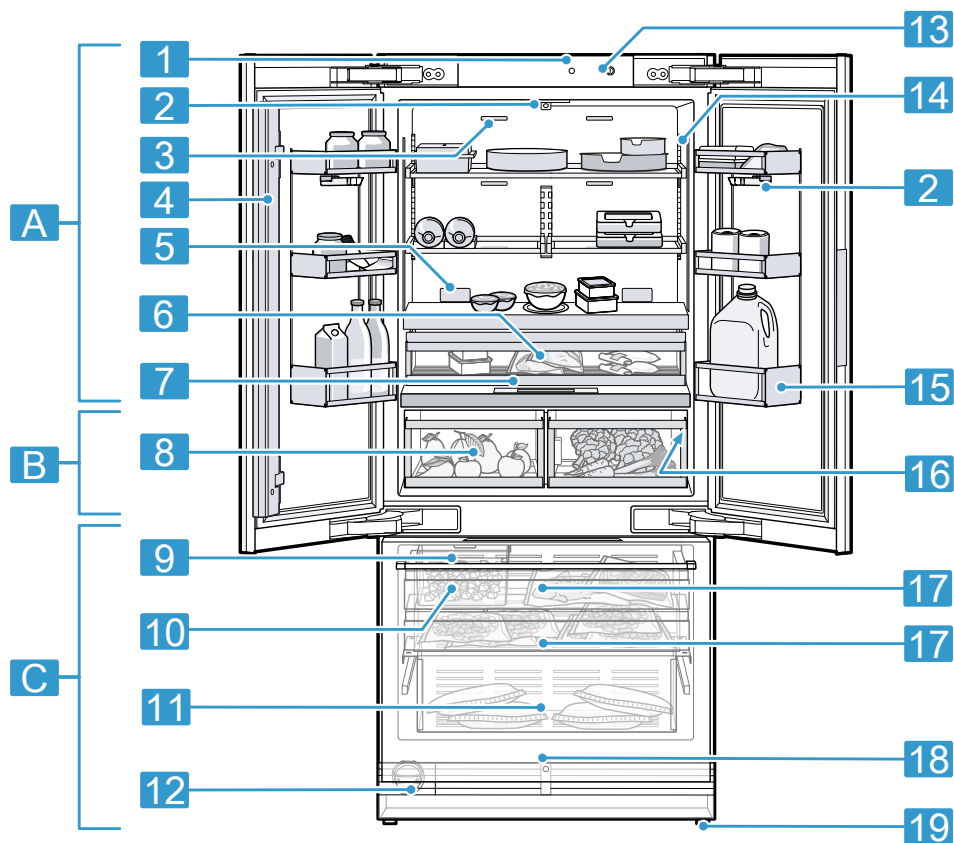

1

ייתכנו הבדלים בין המכשיר שלכם לאיורים כאן עקב הבדלים באבזור ובגודל.

מנגנון סיוע לפתיחת הדלת (תא קירור)	1
מצלמה	2
פתחי אוורור פנימיים (תא הקירור)	3


תא קירור ← עמוד 24	A
מיכל אחסון בקירור ← עמוד 25	B
תא הקפאה ← עמוד 25	C

12	פקק מעקף
13	מתג ראשי
14	תאורה פנימית
15	מתלה דלת לבקבוקים גדולים ←עמוד 14
16	תווית נתונים ←עמוד 36
17	מיכל הקפאה נשלף ←עמוד 14
18	מנגנון סיוע לפתיחת הדלת (תא הקפאה)
19	רגלית מתברגת

4	מסילת דלת עם הגנה מפני עיבוי ←עמוד 8
5	מסנן ריחות ←עמוד 14
6	תא אחסון ←עמוד 13
7	לוח בקרה ←עמוד 12
8	מיכל אחסון בקירור ←עמוד 13
9	מייצר קוביות קרח ←עמוד 27
10	מיכל קוביות קרח ←עמוד 14
11	מכל תלוי למזון קפוא ←עמוד 14

5.2 לוח הבקרה

השתמשו בלוח הבקרה כדי לקבוע את כל הפונקציות של המכשיר ולקבל מידע על מצב הפעולה שלו.

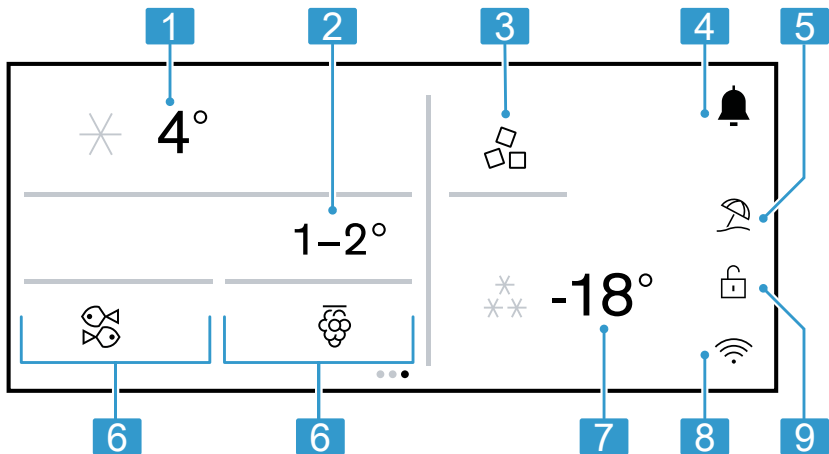

2

6	מאפשר הגדרות במיכל האחסון בקירור.
7	מאפשר הגדרות בתא ההקפאה.
8	מציג את המצב של Home Connect, לדוגמה אם Home Connect מופעל או כבוי.
9	מפעיל או מכבה את נעילת לוח הלחצנים של הצג.

1	מאפשר הגדרות בתא הקירור.
2	מציג את הטמפרטורה של תא האחסון ב-°F או °C.
3	מאפשר הגדרות עבור הכנת קוביות קרח.
4	פותח את מרכז ההתראות.
5	מציג את המצב המוגדר.

עיקרון הפעלה

ישנם אדורים אחדים בצג המגביים למגע. הקישו על לחצנים כדי להפעיל הגדרות. ההגדרות המופעלות מודגשות בצג. ניתן לשנות או לבטל הגדרות פעילות על ידי לחיצות חוזרות על הלחצנים המתאימים בצג.

שימו לב

- לחץ מופרד על הצג עלול לגרום לנזק.
- אל תפעיל לחץ חזק על הצג.
- אל תלחץ על הצג עם חפצים חדים או דוקרים.

סמל	תיאור
①	הצגת מידע נוסף בצג
⦿	הפעלת פונקציה
○	כיבוי פונקציה

6 אביזרים פנימיים

האבדור של מכשירכם תלוי בדגם שרכשתם.

6.1 מדף

שימו לב

כאשר המדף תלוי באלכסון הווים שלו עלולים לשרוט את הדופן האחורית של תא הקירור. ודאו שהמדף מונח בצורה אופקית מאוזנת ושהווים מחוברים במלואם.

כדי לשנות את מיקום המדף לפי הצורך אתם יכולים להוציא את המדף ולהכניס אותו במקום אחר.

← "הוצאת מדף", עמוד 29

6.3 מיכל אחסון בקירור

כדי להגדיר במיכל האחסון בקירור באופן אוטומטי את לחות האוויר והטמפרטורה הנכונות למוצרי המזון שלכם, השתמשו בהגדרות האחסון השונות של מיכל האחסון בקירור. אחסנו פירות וירקות טריים ללא אריזות במיכל האחסון בקירור. פירות וירקות חתוכים יש לאחסן כשהם מכוסים או ארוזים באריזה אטומה. מטעמי היגיינה אין לאחסן פירות וירקות ביחד עם בשר ודגים במיכל האחסון בקירור. ייתכן שיצטברו מי עיבוי במיכל האחסון בקירור, בהתאם לכמות המזון וסוגו. נגבו את מי העיבוי באמצעות מטלית יבשה. כדי לשמור על האיכות והארומה אחסנו פירות וירקות רגישים לקור מחוץ למכשיר, בטמפרטורה של כ-8°C (46°F) עד 12°C (54°F), לדוגמה אננס, בננות, פירות הדר, מלפפונים, קישואים, פלפלים, עגבניות ותפוחי אדמה.

6.2 תא אחסון

הטמפרטורות בתא האחסון נמוכות מאלו שבתא הקירור. מדי פעם יכולות להתפתח טמפרטורות הנמוכות מ-0°C. כדי להגיע לטמפרטורות קרובות ל-0°C בתא האחסון, כווננו טמפרטורה של 2°C, במכל האחסון. השתמש בטמפרטורות הנמוכות יותר בתא האחסון לצורך שמירה של מזון מתכלה כגון דגים, בשר ונקניק.

6.4 מיכל הקפאה בשלף

כדי להשיג ראות טובה יותר ולהוציא מהר יותר מזון קפוא, שלפו החוצה את מיכל ההקפאה הנשלף.

6.5 מכל תלוי למזון קפוא

אחסנו פריטי מזון קפואים גדולים במכל התלוי למזון קפוא.

6.6 מדף דלת

כדי לכוון את מדף הדלת לפי הצורך, ניתן להסיר אותו ולהתקין במקום אחר.
← "הסרת מדף הדלת", עמוד 29

6.7 מיכל קוביות קרח

כאשר פונקציית הכנת הקרח מופעלת, קוביות הקרח נשמרות אוטומטית במיכל קוביות הקרח.

שימו לב

מייצר קוביות הקרח עלול להיחסם או להיפגע על ידי מזון או חפצים שמונחים במגש קוביות הקרח.

▲ אסור בשום אופן לשמור מזון או חפצים במגש קוביות הקרח.

הערה: כדי למנוע מילוי יתר של מיכל קוביות הקרח, אין לפזר את הקוביות בעזרת היד בתוך המיכל.

עצה: כדי למנוע נפילה של קוביות קרח מיכל קוביות הקרח תוך תא ההקפאה, אין לטרוק את מגירת תא ההקפאה.

6.8 מצלמה

בכל פעם שהדלת נסגרת המצלמה מצלמת תמונה של מיכל האחסון בקירור ושל פנים הדלתות של מיכל האחסון בקירור. בעזרת אפליקציית Home Connect ומכשיר נייד תוכלו לגשת לתמונות. הפעלת המצלמות

הערה: כדי לאפשר למצלמות לצלם תמונות באיכות טובה, סגרו את הדלת לאט. סגירה מהירה מדי של הדלת עלולה לגרום לצילומים מטושטשים.

תמונות לא ברורות יכולות לבבוע גם ממצלמה מלוכלכת.

← "ניקוי המצלמה", עמוד 29

6.9 מסנן ריחות

מסנן הריחות מסנן ריחות וניתן להחליפו בעת הצורך.

← "החלפת מסנן הריחות", עמוד 30

החליפו את מסנן הריחות כל שנה. זאת, כדי לשמור על איכות גבוהה של המסנן באופן קבוע.


6.10 אביזרים

השתמשו באביזרים מקוריים. הם מותאמים למכשיר שלכם.
אביזרי המכשיר משתנים בהתאם לדגם.

מצע נגד החלקה

המצע נגד החלקה מונע החלקת בקבוקים ומוצרי מזון.


ייתכן שיצטברו מי עיבוי על המצע נגד החלקה, בהתאם לכמות ולסוג המזון המאוחסן. במידת הצורך, הוציאו את המצע נגד החלקה ונגבו את מי העיבוי באמצעות מטלית יבשה.

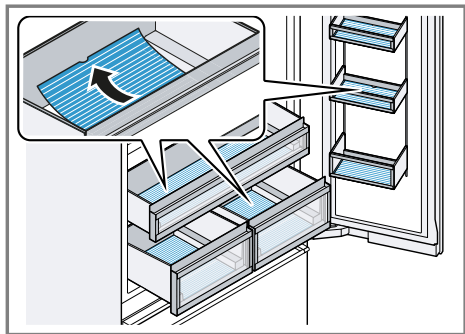

מתקן לביצים

אחסנו את הביצים בצורה בטוחה במתקן לביצים.

עצה: הניחו את כף הקרח בקדמת מיכל האחסון לקוביות קרח.

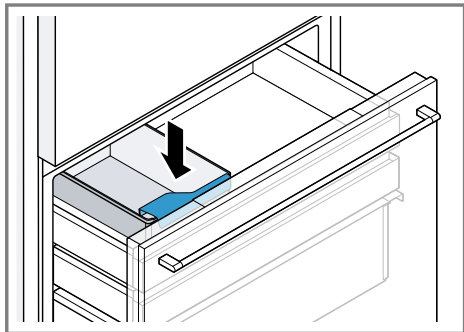

7 לפני ההפעלה הראשונה של המכשיר


7.1 ביצוע הפעלה ראשונית

דרישות

- המכשיר מותקן בהתאם להוראות ההתקנה המצורפות.
- המכשיר מחובר לחשמל. ← עמוד 10
- 1. הדליקו את המכשיר באמצעות המתג הראשי.
← "המכשיר", איור 1, עמוד 12
- 2. סגרו את דלתות המכשיר, המתינו 3 דקות ופתחו אותן שוב.
- 3. בחרו שפה והקישו על >.
- 4. כדי לאשר את המידע המופיע בתצוגה, הקישו על >.
- 5. כדי להפעיל את מנגנון העזר לפתיחת הדלת, הקישו על > ופעלו בהתאם להוראות בתצוגה.
- 6. כדי להחליף את סוג מסנן המים, הקישו על "החלפת סוג מסנן" ופעלו בהתאם להוראות בתצוגה.
- 7. כדי לבדוק את חיבור המים, פעלו בהתאם להוראות בתצוגה ולחצו על >.
- 8. כדי לאשר את הסיכום, הקישו על >.
- 9. כדי להשלים את השימוש הראשון, הקישו על ✓.
- ✓ המכשיר מופעל מחדש, ובתצוגה מופיעה אנימציה.
- 10. לחלופין הקישו על , בחרו בשפה הרצויה ואשרו בלחיצה על ✓.

מדף בקבוקים מתכוונן

אחסנו בקבוקים בבטחה על מדף הבקבוקים המתכוונן.

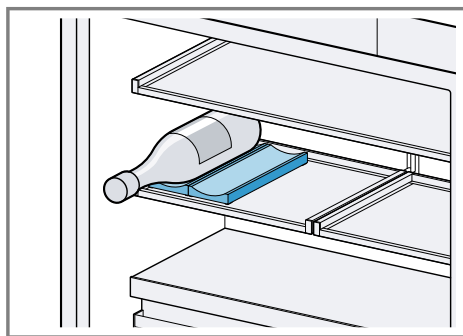

סופג אתילן

הוראות בטיחות חשובות ומידע על ההתקנה והשימוש ניתן למצוא בהוראות ההתקנה המצורפות לסופג האתילן. סופג האתילן מאט את ההבשלה של פירות וירקות הרגישים לאתילן כדי שיישארו טריים לפרק זמן ארוך יותר.

התקנת סופג אתילן

- ◀ התקינו את סופג האתילן בהתאם להוראות ההתקנה של סופג האתילן.

שימוש בערכת מילוי

1. התקינו את הרכיבים של ערכת המילוי בהתאם להוראות ההתקנה של סופג האתילן.
2. החליפו את השקיות לפחות אחת ל-6 חודשים לאחר האיפוס.

הערה: ערכת מילוי תוכלו להשיג בשירות הלקוחות שלנו או באתר האינטרנט שלנו.

כף קוביות קרח

באמצעות כף קוביות הקרח תוכלו לקחת מנה אחת של קוביות קרח.

- הטמפרטורה במכשיר משתנה כתלות בתנאים הבאים:
 - תדירות פתיחת המכשיר
 - קיבולת
 - טמפרטורת המדון הטרי המאוחסן
 - טמפרטורת הסביבה
 - חשיפה לקרינת שמש ישירה

8.3 כיבוי המכשיר

- ◀ כבו את המכשיר באמצעות המתג הראשי.
← "המכשיר", איור 13/1 עמוד 12

8.4 קביעת הטמפרטורה

הגדרת הטמפרטורה בתא הקירור

1. הקישו על צג הטמפרטורה (תא קירור).
2. החליקו אל הטמפרטורה הרצויה.
הטמפרטורה המומלצת לתא הקירור היא 4°C (39°F).

קביעת הטמפרטורה בתא ההקפאה

1. הקישו על תצוגת הטמפרטורה (תא ההקפאה).
2. החליקו אל הטמפרטורה הרצויה.
הטמפרטורה בתא ההקפאה היא -18°C (0°F).

8.5 הגדרת אחסון במיכל האחסון בקירור

אפשר לקבוע את הטמפרטורה ולחות האוויר במיכל האחסון בקירור באמצעות הגדרות אחסון שנקבעו מראש.

עצה: כוונונים נוספים אפשריים באמצעות אפליקציית Home Connect.

הגדרת אחסון במיכל האחסון בקירור

1. הקישו על הגדרת אחסון במיכל האחסון בקירור.
2. החליקו אל הגדרת האחסון המבוקשת ואשרו בלחיצה על >.

8.6 נעילת לחצנים

נעילת הלחצנים מונעת הפעלה לא רצויה או שגויה של המכשיר.

הערה: ניתן להפעיל או לבטל לצמיתות את נעילת הלחצנים האוטומטית.

11. הקישו על >.

12. להתקנה של Home Connect, הפעילו את "מסייע Home Connect" בלחיצה על > ופעלו לפי ההוראות בתצוגה.

13. הערה: אם תדלגו על "מסייע Home Connect", יופיעו בתצוגה הגדרות ידניות נוספות.

◀ בחרו את יחידת הטמפרטורה $^{\circ}\text{C}$ או $^{\circ}\text{F}$.

◀ בחרו את תבנית השעה 12 או 24 .

◀ הגדירו את השעה ולחצו על >.

◀ כדי לאשר את ההגנה מפני חמצון לחצו על >.

◀ התחילו את ההתקנה של סופג האתילן בלחיצה על > ופעלו לפי ההוראות בתצוגה.

14. כדי לאשר את המידע המופיע בתצוגה, הקישו על >.

15. סיימו את ההפעלה הראשונית בלחיצה על ✓.

8 הפעלה בסיסית

8.1 הפעלת המכשיר

1. הדליקו את המכשיר באמצעות המתג הראשי.

← "המכשיר", איור 13/1 עמוד 12
✓ המכשיר יתחיל לקרר.

2. קבעו את הטמפרטורה המבוקשת.
← עמוד 16

8.2 עצות להפעלה

- לאחר הפעלת המכשיר, יחלפו מספר שעות עד שהוא יגיע לטמפרטורה שנקבעה מראש.
- אין להכניס מוצרי מדון לפני הגעה לטמפרטורה שכווננה מראש.
- ייתכן שדפנות המכשיר יתחממו מעט לעתים. זה מונע הצטברות מי עיבוי.
- שימו לב שבזמן סגירת הדלת, אין מוצרים שחוסמים את הדלת.
- לאחר סגירת הדלת עשוי להיווצר ואקום. במקרה כזה, ייתכן קושי בפתיחת הדלת לאחר מכן. המתינו רגע עד שהוואקום יתפוגג.

9 הגדרות בסיסיות

9.1 שינוי ההגדרות הבסיסיות

- 1. החליקו לכיוון "הגדרות".
- 2. החליקו והקישו על ההגדרה הבסיסית הרצויה.
- 3. שנו את ההגדרה הבסיסית.

הפעלת נעילת הלחצנים

- ◀ לחצו על  למשך 2 שניות.
- ✓  מאיר.

ביטול נעילת הלחצנים

- ◀ לחצו על  למשך 2 שניות.

9.2 סקירת ההגדרות הבסיסיות

כאן תוכלו למצוא סקירה של ההגדרות הבסיסיות ושל הגדרות היצרן. ההגדרות הבסיסיות תלויות במאפייני המכשיר.

🎵 "צלילים"

הגדרה	בחירה	תיאור
צלילי אינטראקציה	"רגיל"/"חזק"/"שקט"/"כיבוי"	הפעלה, הגדרה או כיבוי של עוצמת הקול של פעולות.
צלילי הודעות	"רגיל"/"חזק"/"שקט"/"כיבוי"	הפעלה, הגדרה או כיבוי של צליל ההודעות.
צלילי תהליך	"רגיל"/"חזק"/"שקט"/"כיבוי" 30 "שנ"/"3 דק"/"10 דק"	הפעלה, הגדרה או כיבוי של עוצמת הקול. הגדרת חזרה על פעולות.

🔒 "תאורה פנימית"

הגדרה	בחירה	תיאור
בהירות	מ-"1" עד "6" 	כוונון ידני של התאורה הפנימית. הפעלה או כיבוי של התאורה הפנימית האוטומטית.
תפעול התאורה		הפעלה או כיבוי של תאורה מותאמת אישית בעת הפעלת המכשיר.

🔊 "הודעות"

הגדרה	בחירה	תיאור
שכבת מידע		הפעלה או כיבוי של המידע בתצוגה.
רמזים בחלון מוקפץ		הפעלה או כיבוי של המידע הנוסף בתצוגה.
הודעות מוסתרות	איפוס	תצוגה חוזרת של הודעות שהוסתרו.

שפה

הגדרה	בחירה	תיאור
שפה	ראו מידע בתצוגה.	הגדרת שפת התפריט.

שעה ויחידות

הגדרה	בחירה	תיאור
שעה	ראו מידע בתצוגה. ⌚/⌚	עקבו אחר ההנחיות המופיעות בתצוגה והגדירו את השעה. הפעלה או כיבוי של השעה האוטומטית.
תבנית השעה	"12"/"24"	הגדרת תבנית השעה.
יחידת טמפרטורה	"°C"/"°F"	הגדרת יחידת הטמפרטורה.

מתקדם

הגדרה	בחירה	תיאור
מצב הדגמה	⌚/⌚	הפעלה או כיבוי מצב הדגמה. במצב הדגמה המכשיר אינו מקרר.
תצוגת מצב קירור לזמן ארוך	⌚/⌚	הערה: מצב הדגמה זמין לזמן מוגבל לאחר הפעלת המכשיר.
הגדרות יצרן	שחזור	הפעלה או כיבוי של המצב מנוחה.
		איפוס המכשיר להגדרות היצרן.

מכשיר

הגדרה	בחירה	תיאור
הקפאה מהירה אוטומטית	⌚/⌚	הפעלה או כיבוי של הקפאה מהירה האוטומטית. ← "הקפאה מהירה אוטומטית", עמוד 19
מסייע פתיחת דלת	ראו מידע בתצוגה.	הפעלה או ביטול של מנגנון העזר לפתיחת הדלת. מנגנון סיוע לפתיחת הדלת ← עמוד 20
מבוא למכשיר	הפעלה	היכרות עם המכשיר וביצוע התאמות אישיות.

רשת ביתית

הגדרה	בחירה	תיאור
WiFi	⌚/⌚	הפעלה או כיבוי של ה-WiFi.

הגדרה	בחירה	תיאור
מסייע Home Connect	ראו מידע בתצוגה.	התקנת Home Connect. ← עמוד 22
מצלמה		הפעלה או כיבוי המצלמות. ← "מצלמה", עמוד 14
מידע על הרשת	ראו מידע בתצוגה.	מציג מידע על רשת. Home Connect
איפוס נתוני רשת	אישור	איפוס הגדרות. Home Connect
☐ "תצוגה"		
הגדרה	בחירה	תיאור
בהירות	מ-"1" עד "6" 	הגדרה ידנית של תאורת התצוגה. הפעלה או כיבוי של תאורת הצג האוטומטית.
מסך בית מוקטן		הפעלה או כיבוי של מצב חיסכון באנרגיה. במצב חיסכון באנרגיה מופיע בתצוגה תוכן מצומצם, בדגש על מגירות פתוחות.
נעילת בטיחות בפני ילדים	ראו מידע בתצוגה.	הפעלה או כיבוי של "נעילת בטיחות בפני ילדים".

הערה: לאחר כ-6 שעות המכשיר יעבור לפעולה רגילה.

כיבוי קירור מהיר

1. הקישו על צג הטמפרטורה (תא קירור).
 2. הקישו על ✖.
- ✓ ✖ יכבה בתצוגת הטמפרטורה (תא קירור).
✓ הטמפרטורה שנקבעה קודם לכן תוצג.

10.2 הקפאה מהירה אוטומטי

בעת הקפאה מהירה האוטומטי, תא ההקפאה מגיע לטמפרטורות נמוכות הרבה יותר מאשר בהפעלה רגילה. מוצרי המזון יקפאו במהירות גבוהה יותר.
ההקפאה מהירה האוטומטי מופעל כאשר אתם מניחים מצרכי מזון טריים מצד ימין והלאה במיכל התלוי של המזון הקפוא.

10 פונקציות נוספות

גלו מהן הפונקציות הנוספות שאתם יכולים להשתמש בהן במכשיר שלכם. ניתן להגדיר פונקציות נוספות באמצעות אפליקציית Home Connect.

10.1 קירור מהיר

האפשרות קירור מהיר מביאה את תא הקירור לרמת הקור הכי גבוהה שאפשר. הפעילו את קירור מהיר לפני הכנסת כמות גדולה של מוצרי מזון לתא הקירור.
הערה: כאשר האפשרות קירור מהיר מופעלת ייתכנו רעשים רבים מהרגיל.

הפעלת קירור מהיר

1. הקישו על צג הטמפרטורה (תא קירור).
 2. הקישו על ✖.
- ✓ ✖ מהבהב בצג הטמפרטורה (תא הקירור).

כיבוי הקפאה מהירה ידני

1. הקישו על תצוגת הטמפרטורה (תא הקפאה).
2. הקישו על **.
- ✓ ** יכבה בצג הטמפרטורה (תא הקפאה).
- ✓ הטמפרטורה שנקבעה קודם לכן תוצג.

10.4 מצב חופשה

לפני היעדרות ממושכת, ניתן להפעיל במכשיר מצב חופשה, החסכוני בחשמל.

⚠ זיהרות

סכנה לנזק בריאותי!

כאשר מצב החופשה מופעל, תא הקירור מתחמם. טמפרטורה גבוהה עלולה להוביל להתרבות חיידקים וכך לקלקול מזון.

כאשר מצב החופשה מופעל, אין לאחסן מוצרי מזון בתא הקירור.

המכשיר משנה אוטומטית את הטמפרטורות.

תא קירור	14 °C (58 °F)
מיכל אחסון בקירור	טמפרטורה ללא שינוי
תא הקפאה	טמפרטורה ללא שינוי

הערות

- במצב חפשה, הכנת קוביות הקרח כבויה.
 - 'מידע על האופן שבו מפעילים את מצב החופשה, ניתן למצוא בהגדרות השירות.
- ←עמוד 24

10.5 מנגנון סיוע לפתיחת הדלת

מנגנון העזר לפתיחת הדלת מסייע בפתיחת הדלת.

הערה: בהגדרות הבסיסיות תוכלו למצוא כיצד להפעיל, להגדיר או לכבות את מנגנון העזר לפתיחת הדלת. ←עמוד 18

ההקפאה מהירה האוטומטית מופעל ביד היצרן. תוכלו להשבית את ההקפאה מהירה האוטומטית.

כאשר הקפאה מהירה מופעל, ** מאיר וייתכנו רעשים חזקים יותר.

לאחר מכן, המכשיר עובר מהקפאה מהירה האוטומטית לפעולה רגילה.

הערה: בהגדרות הבסיסיות תוכלו למצוא כיצד להפעיל או להשבית את הקפאה מהירה האוטומטית. ←עמוד 18

ביטול ה-הקפאה מהירה האוטומטית

1. הקישו על תצוגת הטמפרטורה (תא הקפאה).
2. הקישו על **.
- ✓ ** נכבה בצג הטמפרטורה (תא ההקפאה).
- ✓ הטמפרטורה שנקבעה קודם לכן תוצג.

10.3 הקפאה מהירה ידנית

הקפאה מהירה ידנית מקררת את תא ההקפאה ככל האפשר.

הפעילו את הקפאה מהירה 4 עד 6 שעות לפני הכנסת מוצרי מזון במשקל כולל גדול מ-2 ק"ג לתא ההקפאה.

השתמשו ב-הקפאה מהירה כדי להאיץ את הכנת קוביות הקרח.

כדי לבצל את מלוא יכולת ההקפאה, השתמשו ב-הקפאה מהירה.

←"תנאים מקדימים ליכולת ההקפאה",

עמוד 26

הערה: כאשר הקפאה מהירה מופעלת ייתכנו רעשים רבים מהרגיל.

הפעלה ידנית של הקפאה מהירה

1. הקישו על תצוגת הטמפרטורה (תא הקפאה).
 2. הקישו על **.
 - ✓ ** מהבהב בצג הטמפרטורה (תא הקפאה).
- הערה:** לאחר כ-54 שעות המכשיר יעבור לפעולה רגילה.

כיבוי התראת הדלת

- ✦ סגרו את דלת המכשיר או הקישו על 🔔.
- ✓ צליל האזהרה כבוי.

11.2 התראת טמפרטורה

כאשר תא ההקפאה חם מדי התראת הטמפרטורה תופעל.
נשמע צליל אזהרה ו- 🔔 "התרעת טמפרטורה" מאיר.



סכנה לבדק בריאות!

- חיידיקים מתרבים בתהליך ההפשרה ועלולים לקלקל את המזון הקפוא.
- ✦ אל תקפאו מחדש מזון שהפשיר או מזון מופשר.
- ✦ הקפאו רק לאחר הבישול או הטיגון.
- ✦ אל תאחסנו מזון קפוא מעבר לתאריך התפוגה שלו.

במקרים הבאים ייתכן שתופעל התראת טמפרטורה:

- המכשיר נכנס לפעולה.
- הכניסו מוצרי מזון למכשיר רק לאחר הגעה לטמפרטורה שנקבעה.
- הוכנסו כמויות גדולות של מזון טרי.
- לפני הכנסת כמויות מזון גדולות הפעילו את הקפאה מהירה.
- דלת תא ההקפאה פתוחה זמן רב מדי.
- בדקו אם המזון הקפוא התחיל להפשיר או הפשיר לגמרי.

כיבוי התראת הטמפרטורה

- ✦ הקישו על ✓.
- ✓ צליל האזהרה כבוי.
- ✓ בתצוגה מוצגת לזמן קצר הטמפרטורה הגבוהה ביותר שהייתה בתא ההקפאה.
- לאחר מכן מוצגת שוב הטמפרטורה שנקבעה.
- ✓ מנקודת זמן זו ואילך המכשיר ימדוד מחדש וישמור את הטמפרטורה הגבוהה ביותר.

פתירת הדלת באמצעות מנגנון העזר לפתיחת הדלת

שימו לב

סגירה מוקדמת חוזרת ונשנית של הדלת עלולה להוביל לבלאי או לכשל של מנגנון העזר לפתיחת הדלת.
לעולם אין לסגור את הדלת כל עוד מנגנון העזר בתהליך פתיחה.
✦ אם בכל זאת סגרתם את הדלת, השאירו אותה סגורה למשך 5 דקות. מנגנון העזר לפתיחת הדלת מאתחל את עצמו.

1. לחצו על הדלת במרכז.
 - ✓ מנגנון העזר לפתיחת הדלת נשלף ופותח מרווח קטן בדלת.
 2. פתחו את הדלת ידנית.
- אם לא תפתחו את הדלת לרווחה תוך 3 שניות, מנגנון העזר לפתיחת הדלת יחזור למקומו והדלת תיסגר.

10.6 מצב מנוחה

מצב מנוחה משבית את כל הפונקציות שאינן הכרחיות.
הפונקציות הבאות כבויים במצב מנוחה:

- קירור מהיר
- הקפאה מהירה אוטומטית ו-הקפאה מהירה ידנית
- התראה
- הכנת קוביות קרח
- תאורה פנימית
- אותות קוליים
- הודעות בלוח הבקרה

הערות

- במצב מנוחה תאורת לוח הבקרה מופחתת.
- בהגדרות הבסיסיות תוכלו למצוא כיצד להפעיל את מצב מנוחה. ← עמוד 18

11 התראה

11.1 התראת דלת

אם דלת המכשיר נותרת פתוחה למשך זמן מה, תופעל התראת דלת.
נשמע צליל אזהרה ו- 🔔 "התרעת דלת תא הקירור ותא ההקפאה" מופיע בתצוגה.

12 Home Connect

מכשיר זה ניתן לשימוש ברשת אלחוטית. חברו את המכשיר למכשיר נייד על מנת

1. סרקו את קוד ה-QR הבא.



תוכלו להשתמש בקוד ה-QR כדי להתקין את האפליקציה Home Connect ולחבר את המכשיר שלכם.

2. עקבו אחר ההנחיות המופיעות באפליקציה Home Connect.

12.2 התקנת עדכון לתוכנת Home Connect

הערה: כאשר ישנו עדכון לתוכנת Home Connect, תופיע הודעה באפליקציה Home Connect.

- ◀ כדי להתקין את העדכון של תוכנת Home Connect, פעלו בהתאם להנחיות באפליקציה Home Connect.
- ✓ במהלך העדכון לוח הבקרה נעול חלקית.

12.3 איפוס ההגדרות של Home Connect

אם ישנן בעיות התחברות בין מכשירכם לרשת WLAN (Wi-Fi) הביתית, או אם אתם רוצים לחבר את מכשירכם לרשת WLAN (Wi-Fi) ביתית אחרת, תוכלו לאפס את ההגדרות של Home Connect.

הערה: כיצד לאפס את הגדרות Home Connect ניתן למצוא בהגדרות הבטיחות ← עמוד 17.

12.4 אבחון מרחוק

שירות הלוקוחות יכול להיכנס למכשיר שלכם באמצעות השליטה מרחוק, אם תפנו בשאלה המתאימה לשירות הלוקוחות, המכשיר

שלט בפעולות שלו באמצעות אפליקציית Home Connect.

שירותי Home Connect אינם זמינים בכל מדינה. זמינותה של פעולת

Home Connect תלויה בזמינות שירותי Home Connect בארצכם. מידע בנוגע לכך ניתן למצוא ב: www.home-connect.com.

על מנת להשתמש ב-Home Connect, התקינו תחילה חיבור לרשת הביתית WLAN (Wi-Fi)¹ ולאפליקציית Home Connect.

לאחר הפעלת המכשיר, המתינו לפחות 2 דקות עד לסיום האתחול הפנימי של

המכשיר. רק לאחר מכן הגדירו את Home Connect.

האפליקציה Home Connect תנחה אתכם לאורך כל תהליך החיבור. פעלו לפי ההוראות ושימו לב למידע באפליקציה Home Connect.

הערות

- הקפידו על הוראות הבטיחות המופיעות בהוראות ההפעלה האלה גם כאשר הפעלת המכשיר מתבצעת באמצעות אפליקציית Home Connect.
← "בטיחות", עמוד 3
- יש תמיד עדיפות להפעלה במכשיר עצמו. בזמן זה, ההפעלה באמצעות אפליקציית Home Connect לא אפשרית.

12.1 התקנת Home Connect

דרישה: למכשיר יש במקום ההצבה קליטת רשת ביתית אלחוטית (Wi-Fi).

¹ Wi-Fi הוא סמל מסחרי רשום של Wi-Fi Alliance.

- קיימת אפשרות שמשתמשים, אנשים או חללים מחוץ למכשיר יצולמו על ידי המצלמות והתמונות יופיעו באפליקציית Home Connect. תמונות כאלה מעובדות במערכת Home Connect כדי להפוך אותן לזמינות באפליקציית Home Connect. מידע על עיבוד הנתונים ניתן למצוא באפליקציית Home Connect.

12.6 מצב החיבור

ל-Home Connect

כאן תמצאו סקירה לגבי מצב החיבור ל-Home Connect.

סמל	תיאור
	המכשיר מחובר לאפליקציית Home C onnect.
	המכשיר אינו מחובר לאפליקציית Home C onnect.
	למכשיר אין חיבור לרשת הביתית.
	האבחון מרחוק מופעל.

13 הגדרות שירות

ניתן לבצע הגדרות שירות שונות.

13.1 שינוי הגדרות שירות

1. החליקו לכיוון "מצבי הפעלה ושירות".
2. החליקו והקישו על הגדרת השירות הרצויה.
3. שנו את הגדרת השירות.

Home Connect מחובר לשרת והשליטה מרחוק זמינה במדינה בה מופעל המכשיר.

עצה: מידע נוסף וכן הוראות לזמינות השליטה מרחוק במדינה שלכם ניתן למצוא באיזור השירות/תמיכה של אתר האינטרנט המקומי: www.home-connect.com.

12.5 אבטחת נתונים

שימו לב להנחיות המתייחסות לאבטחת הנתונים.

כשמחברים את המכשיר בפעם הראשונה לרשת ביתית המחוברת לאינטרנט, המכשיר מעביר את סוגי הנתונים הבאים לשרת Home Connect (הרשמה ראשונית):

- מזהה מכשיר ייחודי (המורכב מקודי המכשיר ומכתובת ה-MAC של מודול תקשורת ה-Wi-Fi המובנה).
- אישור האבטחה של מודול תקשורת ה-Wi-Fi (המיועד לאבטחה טכנית של המידע בחיבור).
- גרסאות התוכנה והחומרה הנוכחיות של המכשיר.
- הסטטוס של כל איפוס קודם להגדרות היצרן.

הרשמה ראשונית זו מכינה את השימוש בפונקציות Home Connect והיא נדרשת רק כאשר ברצונכם להשתמש בפונקציות Home Connect בפעם הראשונה.

הערות

- שימו לב, שפונקציות Home Connect יהיו שימושיות רק באמצעות אפליקציית Home Connect. מידע על הגנת הנתונים ניתן למצוא באפליקציית Home Connect.

13.2 סקירה כללית של הגדרות השירות

כאן תמצאו סקירה כללית של הגדרות השירות.

מדריך מקוצר

הגדרה	בחירה	תיאור
הסרת מגירת הקירור	ראו מידע בתצוגה.	מציג את ההוראות צעד אחר צעד בתצוגה. לחצו על המדריך
הסרת מגירת ההקפאה העליונה		

הגדרה	בחירה	תיאור
ניקוי מסנן חלקיקים למים החלפת מסנן מים עם פחם פעיל		הרצוי ופעלו בהתאם להוראות שבתצוגה.
מצב חופשה		
הגדרה	בחירה	תיאור
מצב חופשה		הפעלה או כיבוי של מצב חופשה. ← "מצב חופשה", עמוד 20
ניהול מסננים		
הגדרה	בחירה	תיאור
מצב מסנן מים מצב מסנן אוויר מצב פילטר סופג אתילן		מציג את המצב של מסנן המים. מציג את המצב של מסנן הריחות. מציג את המצב של סופג האתילן.
מידע על המכשיר		
הגדרה	בחירה	תיאור
מספר סידורי: מס' סידורי: FD (תאריך ייצור): מספר Z: כתובת MAC: WiFi SSID: כתובת IPv4: כתובת IPv6:		מציג מידע על המכשיר.

14 תא קירור

בתא הקירור אפשר לאחסן מוצרי חלב, ביצים, אוכל מבושל, מאפים, קופסאות שימורים פתוחות וגבינה צהובה.
אפשר לכוון טמפרטורה בין 2°C (46°F) ל-8°C (36°F).
בתא הקירור ניתן לאחסן לזמן קצר עד בינוני גם מוצרי מזון המתקלקלים בקלות. ככל שתבחרו טמפרטורה נמוכה יותר, כך יישמרו מוצרי המזון טריים לזמן ארוך יותר.

14.1 עצות לאחסון מוצרי מזון בתא הקירור

- הכניסו רק מוצרי מזון טריים ולא פגומים.
- אחסנו את מוצרי המזון כשהם ארוזים או מכוסים בצורה אטומה.
- כדי שלא להפריע לזרימת האוויר וכדי למנוע קפיאת מזון, אין להניח את המזון לפני פתחי האוורור הפנימיים או בצמוד לדופן האחורית הפנימית.
- הניחו למזונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר.
- שימו לב לתאריך התפוגה שצוין היצרן.

השתמשו בהגדרות האחסון ☞ ו-☞ עבור
"בשר" ו-"דגים" בלבד.

15.2 זמני אחסון במיכל האחסון בקירור ב-0°C (32°F)

זמני האחסון תלויים באיכות המקורית של מוצרי המזון.

מוצרי מזון	זמן אחסון
דגים טריים, פירות ים	עד 3 ימים
עוף, בשר (מבושל/מטוגן)	עד 5 ימים
בקר, בשר לבן, כבש, נקניקיות (בשר קר)	עד 7 ימים
דג מעושן, ברוקולי	עד 14 ימים
חסה, שומר, משמשים, שזיפים	עד 21 ימים
גבינת ברי, יוגורט, גבינה לבנה, ריוויין, כרובית	עד 30 ימים

16 תא הקפאה

בתא ההקפאה אפשר לאחסן מזון קפוא, להקפיא מוצרי מזון ולהכין קוביות קרח. אפשר לכוון טמפרטורה בין -16°C (3°F) ל- -24°C (-11°F).

מוצרי מזון המאוחסנים לטווח ארוך יש לאחסן בטמפרטורה של -18°C (0°F) ומטה.

כדי להגן על מוצרי המזון מכוויות קור במקפיא, ניתן להגדיר טמפרטורה קבועה של -24°C (-11°F).

כדי להגן על מוצרי מזון עתירי שומן כמו דגים ובשר מפני חמצון, ניתן להגדיר טמפרטורה קבועה של -24°C (-11°F). החל מטמפרטורת מקפיא של -24°C (-11°F).

תא ההקפאה מאפשר אחסון לטווח ארוך של מוצרי מזון הנוטים להתקלקל. הטמפרטורות הנמוכות מאטות או עוצרות את הקלקול.

16.1 יכולת הקפאה

יכולת ההקפאה מציינת איזו כמות של מוצרי מזון אפשר להקפיא לחלוטין בתוך כמה שעות.

14.2 אזורי קירור בתא הקירור

מערכת הקירור בסחרור אוויר מפזרת את האוויר באופן אחיד בתא הקירור ומבטיחה טמפרטורה קבועה בכל המדפים.

האזור הקר ביותר

האזור הקר ביותר נמצא באזור התחתון ליד הדופן האחורית.

עצה: אחסנו מוצרי מזון המתקלקלים בקלות במיכל האחסון בקירור, לדוגמה דגים, נקניק ובשר.

← "מיכל אחסון בקירור", עמוד 25

15 מיכל אחסון בקירור

במיכל האחסון בקירור ניתן לשמור על טריות מוצרי מזון לדמן ארוך פי שלוש בהשוואה לתא הקירור.

אפשר לקבוע טמפרטורה באמצעות כוונוני האחסון שנקבעו מראש, 0°C (32°F) עד 3°C (37°F).

הטמפרטורה הנמוכה והלחות האופטימלית במיכל האחסון בקירור מבטיחות תנאי אחסון אידיאליים למוצרי מזון שנוטים להתקלקל בקלות.

15.1 המלצות אחסון במיכל האחסון בקירור

הגדרת אחסון	מוצרי מזון
☞ פירות וירקות	עירוב של פירות וירקות
☞ פירות	פירות
☞ ירקות	ירקות
☞ בשר	בשר
☞ דגים	דגים
☞ משקאות	משקאות
☞ נקניקים/נקניקיות	בשר פרוס ונקניקים
☞ גבינה	גבינות ומוצרי חלב
☞ תכולה מעורבת	מגוון מוצרים

עצה: פירות, ירקות, משקאות וחטיפים עלולים לקפוא בטמפרטורה הנמוכה מ- 0°C (32°F).

הנתונים על יכולת ההקפאה מצוינים בתווית הנתונים.

← "המכשיר", איור 1/16 עמוד 12

תנאים מקדימים ליכולת ההקפאה

1. הפעילו את הקפאה מהירה כ-24 שעות לפני הכנסת מוצרי מזון טריים.
2. הניחו תחילה את מוצרי המזון במיכל הנשלף לפריטי מזון קפואים.

16.2 ניצול מרבי של נפח תא ההקפאה

גלו כיצד תוכלו לאחסן את כמות המזון הקפוא המרבית בתא ההקפאה.

1. הוציאו את כל האביזרים מתא ההקפאה. ← עמוד 29
2. אחסנו את המזון ישירות על המדפים ועל רצפת תא ההקפאה.

16.3 עצות לאחסון מוצרי מזון בתא ההקפאה

- אחסנו את מוצרי המזון כשהם ארוזים או מכוסים בצורה אטומה.
- הרחיקו מזון המיועד להקפאה ממזון קפוא.
- חלקו את המזון על שטח גדול במיכל התלוי של המזון הקפוא.

16.4 עצות להקפאת מוצרי מזון טריים

- הקפיאו רק מוצרי מזון טריים ולא פגומים.
- הקפיאו את מוצרי המזון במנות.
- מוצרי מזון מבושלים מתאימים טוב יותר להקפאה ממוצרי מזון גולמיים.
- ירקות יש לשטוף, לחתוך ולחלוט לפני ההקפאה.
- פירות יש לשטוף, לגלען ולפי הצורך לקלף אותם ואולי להוסיף סוכר או תמיסת חומצה אסקורבית, לפני ההקפאה.
- מוצרים המתאימים להקפאה הם לדוגמה מאפים, דגים, בשר, עוף, ביצים ללא קליפה, גבינה, חמאה, גבינה לבנה, מזון מוכן ושאריות מזון.
- מוצרי מזון שאינם מתאימים להקפאה הם לדוגמה חסה, צנוניות, ביצים בקליפתן,

ענבים, תפוחים ואגסים לא מבושלים, יוגורט, שמנת חמוצה, קרם פרש ומיונד.

אריזת מזון קפוא

חומרי אריזה מתאימים וסוג אריזה נכון משפיעים מאוד על איכות המוצר ומונעים כוויות קור.

1. הניחו את מוצרי המזון באריזה.
2. דחקו החוצה את כל האוויר.
3. סגרו את האריזה בצורה אטומה לאוויר כדי שמוצרי המזון לא יאבדו את טעמם ולא יתייבשו.
4. רשמו על האריזה את תכולתה ואת תאריך ההקפאה.

16.5 עמידות המזון כשהוא מוקפא -18°C (0°F)

מוצרי מזון	זמן אחסון
דגים, נקניק, אוכל מבושל, מאפים	עד 6 חודשים
עוף, בשר	עד 8 חודשים
ירקות, פירות	עד 12 חודשים

16.6 שיטות להפשרת מזון קפוא



זהירות

סכנה לבק בריאות!


חיידיקים מתרבים בתהליך ההפשרה ועלולים לקלקל את המזון הקפוא.

- אל תקפיאו מחדש מזון שהפשיר או מזון מופשר.
- הקפיאו רק לאחר הבישול או הטיגון.
- אל תאחסנו מזון קפוא מעבר לתאריך התפוגה שלו.
- ניתן להפשיר בתא הקירור מוצרי מזון מן החי, כמו דגים, בשר, גבינה וגבינה לבנה.
- לחם יש להפשיר בטמפרטורת החדר.
- הכינו במקורגול, בתנור או על הכיריים מוצרי מזון המיועדים לצריכה מיידית.

17 מערכת מים

המכשיר שלכם כולל רכיבים המובילים מים.

2. סובבו את פקק המעקף ב-90 מעלות נגד כיוון השעון ① והוציאו ② אותו.
- ▲ הוציאו את פקק המעקף בזריזות, מאחר שהוא עשוי להיות נתון ללחץ.

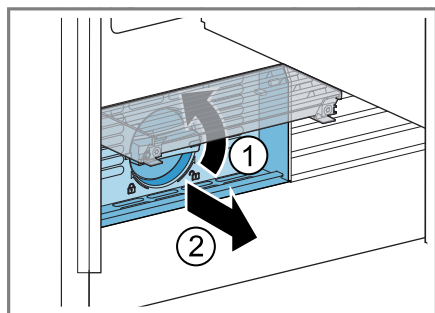

הערות

- בעת הסרת פקק המעקף עלולים לטפטף מתוכו מעט מים. נגבו את המים שטפטפו במטלית יבשה.
 - ניתן להשליך את פקק המעקף המשומש לאשפה הביתית.
3. דחפו את מסנן המים לתוך פתח המסנן עד למעצור, וסובבו אותו ב-90 מעלות עם כיוון השעון.
 4. סגרו את מכסה המסנן.
 5. השליכו את קוביות הקרח המיוצרות ב-24 השעות הראשונות, ומזגו מים במשך 5 דקות והשליכו אותם.

17.2 מייצר קוביות קרח

השתמשו בפונקציות השונות של מייצר קוביות הקרח להכנת קוביות קרח.



אזהרה

סכנת פציעה!

- חלקים מסתובבים עלולים לגרום לפציעות.
- ▲ לעולם אין לשלוח יד מתחת למייצר קוביות הקרח.

הכנת קוביות קרח	ייצור רגיל
-----------------	------------

הערה: מייצר קוביות הקרח מזהה אוטומטית שמכל קוביות הקרח מלא ומפסיק את הכנת קוביות הקרח.
עשויות לעבור 48 שעות עד שמכל קוביות הקרח מתמלא.

מערכת המים מתפקדת רק כאשר מותקן מסנן מים או פקק מעקף.
כבו את ייצור קוביות הקרח, לפני ניתוק המכשיר מהחיבור למי השתייה. ← עמוד 28

17.1 פקק מעקף


פקק המעקף מסנן מהמים רק חלקיקים גדולים, ובמקרה הצורך אפשר לנקות אותו.

הערה: פקק המעקף אינו מסלק חיידקים או מיקרואורגניזמים מחוללי מחלות מתוך המים.

עצה: אם ברצונכם להפחית חומרים מזדמנים נוספים, כגון כלוראמין, עופרת ותרופות, ולא התקנתם מערכת סינון מים חיצונית, תוכלו להחליף את פקק המעקף של מסנן המים. ניתן לרכוש מסנן מים דרך שירות הלקוחות והמשווקים המורשים או באתר האינטרנט שלנו.

החלפת פקק מעקף במסנן המים

1. פתחו את מכסה המסנן כלפי מעלה.

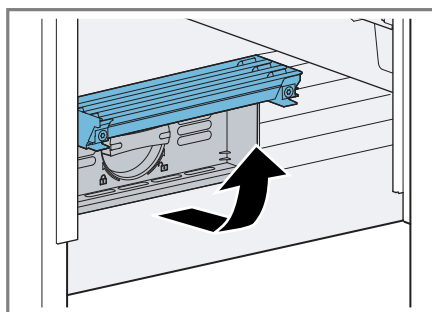

19 ניקוי ותחזוקה

ניקוי המקומות הלא נגישים חייב להתבצע ע"י שירות הלקוחות. הניקוי ע"י שירות הלקוחות עלול לעלות כסף.

19.1 הוראות טיפול למשטחי

נירוסטה

השתמש לצורך הטיפול והניקוי של משטחי נירוסטה רק בחומרי ניקוי ומטליות ניקוי שמתאימים לנירוסטה.

עצות

- כדי למנוע שריטות גלויות, נגב את משטח הנירוסטה בכיוון המרקם של פני השטח.
- ניתן לקנות את חומרי הניקוי ומטליות הניקוי המתאימים דרך שירות הלקוחות שלנו, המשווק או אתר האינטרנט שלנו.

19.2 הכנת המכשיר לניקוי

1. כבו את המכשיר.
 2. נתקו את המכשיר מהחשמל.
נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
 3. הוציאו את כל מוצרי המזון ואחסנו אותם במקום קר.
הניחו אוגרי קור על מוצרי המזון, אם יש ברשותכם.
 4. הוציאו את כל האביזרים מהמכשיר.
- ← עמוד 29

19.3 ניקוי המכשיר

⚠ אזהרה

סכנת התחשמלות!

חדירת לחות עלולה לגרום להתחשמלות.

- אין לנקות את המכשיר במכשיר ניקוי בקיטור או בלחץ גבוה.

נזלים בתאורה או בבקרים עלולים להיות מסוכנים.

שימו לב

חומרי ניקוי לא מתאימים עלולים לפגוע במשטחי המכשיר.

- אין להשתמש בכריות קרצוף קשות או בספוגי ניקוי שוחקים.

עצה: אם לקוביות הקרח יש טעם לא טוב, השליכו את שאר קוביות הקרח ואת קוביות הקרח שיוצרו ב-24 השעות הבאות. אם לקוביות הקרח עדיין יש טעם לא טוב, החליפו את מסנן המים.

הפעלת מייצר קוביות הקרח

הערות

- ייצור קוביות הקרח מתחיל מיד כשהמכשיר מופעל, ותא ההקפאה מגיע לטמפרטורה שנקבעה.
 - קוביות הקרח הראשונות מוכנות כ-4 שעות מהרגע שתא ההקפאה הגיע לטמפרטורה שנקבעה.
- דרישה:** המכשיר מחובר לחיבור למי השתייה.
- ▶ מסיבות היגייניות, יש להשליך את קוביות הקרח שיוצרו ב-24 השעות הראשונות.

הפעלת הכנת קוביות הקרח

1. הקישו על ההגדרות של מתקן קוביות הקרח.
2. החליקו לכיוון .

כיווי הכנת קוביות הקרח

1. הקישו על ההגדרות של מתקן קוביות הקרח.
2. החליקו לכיוון .

18 הפשרה

18.1 הפשרה בתא הקירור

תא הקירור של מכשירכם מפשיר אוטומטית.

18.2 הפשרה במיכל אחסון בקירור

מיכל האחסון בקירור של מכשירכם מפשיר אוטומטית.

18.3 הפשרה בתא ההקפאה

בזכות מערכת NoFrost האוטומטית תא ההקפאה נותר ללא קרח. לא נדרשת הפשרה.


3. החדירו את המסננת לתוך פקק המעקף.
4. דחפו את פקק המעקף בצורה אופקית אל פתח המסנן עד למעצור, וסובבו את הכפתור 90° בכיוון השעון עד למעצור.

19.6 הסרת אביזרים

אם אתם רוצים לנקות את האביזרים ביסודיות, הוציאו אותם מהמכשיר.


הוצאת מדף

- ◀ הרימו מעט את המדף ① והסירו אותו ②.

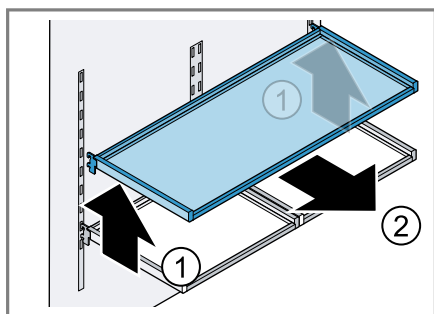

הסרת מדף הדלת

- ◀ הרימו והוציאו את מדף הדלת.

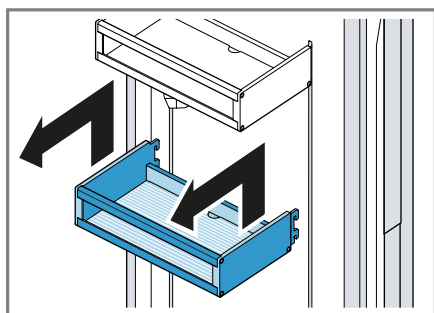

- ◀ אין להשתמש בתכשירי ניקוי חריפים או שורטים.
- ◀ אין להשתמש בתכשירי ניקוי שמכילים אחוז גבוה של אלכוהול.
- ניקוי אביזרים וחלקים של המכשיר במדיח הכלים עלול לגרום להם להתעוות או לשנות את צבעם.
- ◀ לעולם אין לנקות חלקים ואביזרים במדיח הכלים.

1. הכינו את המכשיר לניקוי. ← עמוד 28
2. נקו את המכשיר, האביזרים וחלקי המכשיר כמו גם את אטמי הדלתות בספוג כלים עדין, מים פושרים ונוזל ניקוי כלים בערך חומציות ניטרלי.
3. נגבו ויבשו ביסודיות במטלית רכה ויבשה.
4. הכניסו את האביזרים.
5. חברו את המכשיר לחשמל. ← עמוד 10
6. הדליקו את המכשיר.
7. הכניסו את מוצרי המדון.

19.4 ניקוי המצלמה


כאשר הטמפרטורה או לחות האוויר משתנים עדשות המצלמות עשויות להתכסות אדים.

1. נקו את המצלמה במטלית מיקרופיבר.
2. נקו את עדשות המצלמה במטלית מיקרופיבר ובחומר דוחה מים.

19.5 ניקוי פקק המעקף


עצה: נקו את פקק המעקף פעם בשנה.

1. סובבו את הכפתור של פקק המעקף ב-90 מעלות נגד כיוון השעון והוציאו את פקק המעקף.
2. הוציאו את המסננת מתוך פקק המעקף ① ונקו אותה במים זורמים ②.

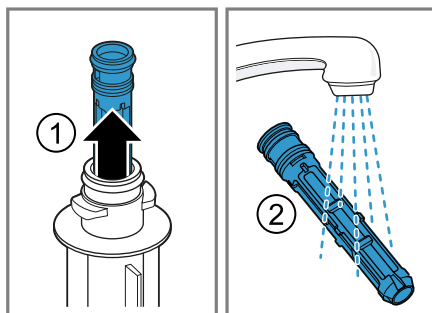


הוצאה של מיכל קוביות הקרח

1. משכו את מיכל ההקפאה הנשלף החוצה עד למעצור.
2. הרימו את מיכל קוביות הקרח מעט מלפנים והוציאו אותו.

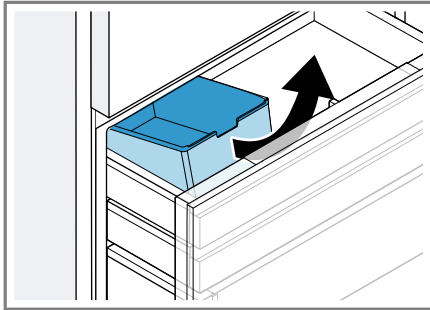


הוצאת מיכל האחסון

1. שלפו את מיכל האחסון עד למעצור.
2. לחצו על שני הצדדים של נעילת המסילות הנשלפות שמתחת לתא האחסון מבפנים החוצה ① והוציאו את תא האחסון ②.

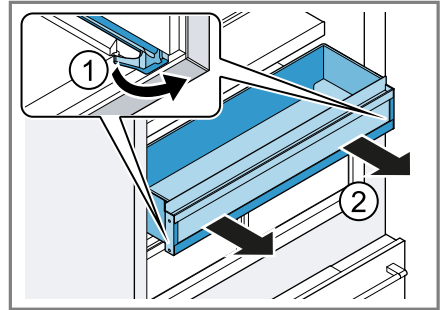

19.7 החלפת מסנן הריחות


1. הוציאו את התפס של מסנן הריחות.
2. הוציאו את מסנן הריחות המשומש מתוך תפס מסנן הריחות והכניסו במקומו מסנן ריחות חדש.

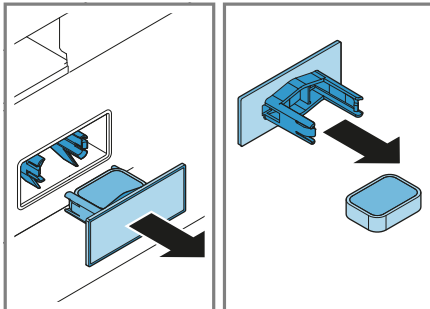

הערה: ניתן להשיג מסנן ריחות חדש בשירות הלקוחות או באתר האינטרנט שלנו.

הסרת מיכל האחסון בקירור

1. שלפו החוצה את מיכל האחסון הקר עד כמה שניתן.
2. לחצו על שני הצדדים של נעילת המסילות הנשלפות שמתחת למיכל האחסון בקירור מבפנים החוצה ① והוציאו את מיכל האחסון בקירור ②.

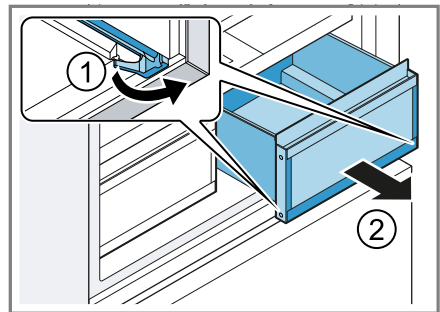

20 תיקון תקלות

תקלות קלות במכשיר תוכלו לתקן בעצמכם. קראו את ההנחיות לתיקון תקלות לפני שאתם יוצרים קשר עם שירות הלקוחות. כך תימנעו מעלויות מיותרות.

⚠ אזהרה

סכנת התחשמלות!

תיקונים לא מקצועיים עלולים להיות מסוכנים.

- רק בעלי מקצוע מיומנים רשאים לבצע תיקונים במכשיר.
- מותר להשתמש רק בחלקי חילוף מקוריים לצורך תיקון המכשיר.

- במקרה של נדק לכבל חיבור החשמל או לכבל החשמל של המכשיר, יש להחליפו בכבל חיבור חשמל או בכבל חיבור חשמל מיוחד, אותו ניתן להשיג אצל היצרן או אצל שירות הלקוחות שלו.

תקלה	גורם ופתרון תקלות
המכשיר אינו מקרר, התצוגות והתאורה דולקים.	מופעל מצב הדגמה. 1. החליקו לכיוון "הגדרות". 2. החליקו לכיוון ☹ "מתקדם". 3. הקישו על "מצב הדגמה" ☺.
תאורת ה-LED אינה פועלת.	סיבות שונות אפשריות. א. התקשרו לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.
יחידת הקירור נדלקת לעיתים קרובות יותר ולמשך זמן רב יותר.	המכשיר נפתח לעיתים קרובות. א. אל תפתחו את דלת המכשיר ללא צורך. פתחי האוורור החיצוניים מכוסים. א. הרחיקו חסמים מול פתחי האוורור החיצוניים.
זו אינה תקלה. מכשירי קירור מודרניים מופעלים בתדירות גבוהה יותר והם בעלי רמות הספק שונות כדי לקרר בצורה יעילה יותר.	
שכבת כפור נוצרת על הקיר האחורי הפנימי של תא הקירור.	א. הרחיקו חסמים מול פתחי האוורור החיצוניים. א. מקמו את המכשיר במרחק גדול ככל האפשר מגופי חימום, כיריים ומקורות חום אחרים. מנעו חשיפה של המכשיר לקרינת שמש ישירה. א. פתחו את המכשיר לזמן קצר ככל האפשר. א. אפשרו למזונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר.
זו אינה תקלה. מכשירי קירור מודרניים מבטיחים טמפרטורה אחידה יותר בתא הקירור. הקיר האחורי הפנימי של תא הקירור מופשר אוטומטית באופן קבוע.	
לא פועל Home Connect באופן תקין.	א. פתחו את המכשיר לזמן קצר ככל האפשר. א. ארזו את המזון בצורה אטומה לאוויר או כסו אותו. א. אפשרו למזונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר. א. השאירו תמיד מרווח בין מוצרי המזון לקירות הפנימיים. סיבות שונות אפשריות. א. עבור אל www.home-connect.com .

גורם ופתרון תקלות	תקלה
המצלמות לא מופעלות ב-Home Connect. ◀ הפעילו את המצלמות. המצלמות אינן מכילות. 1. כבו את המכשיר. 2. נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. 3. חברו את המכשיר בחזרה לאחר 5 דקות. 4. הפעילו את המכשיר באמצעות המתג הראשי. ← "המכשיר", איור 1, עמוד 13 5. סגרו את דלתות המכשיר והמתינו 3 דקות. 6. אם התקלה אינה נפתרת, התקשר לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.	המצלמות לא מצלמות.
דלת המכשיר נסגרה מהר מדי. ◀ סגרו לאט את דלת המכשיר. עדשות המצלמות מכוסות אדים. דלת המכשיר נפתחה לזמן רב מדי. 1. נקו את המצלמות. ← עמוד 29 2. אל תשאירו את דלת המכשיר פתוחה זמן רב מדי. נזק בשכבה למניעת אדים. ◀ התקשרו לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.	תמונות המצלמות אינן חדות.
המצלמות אינן מכילות. 1. כבו את המכשיר. 2. נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. 3. חברו את המכשיר בחזרה לאחר 5 דקות. 4. הפעילו את המכשיר באמצעות המתג הראשי. ← "המכשיר", איור 1, עמוד 13 5. סגרו את דלתות המכשיר והמתינו 3 דקות. 6. אם התקלה אינה נפתרת, התקשר לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.	תמונות חסרות, אינן חתוכות כראוי או מציגות זווית שגויה.
הרכיבים האלקטרוניים זיהו תקלה. 1. כבו את המכשיר. 2. נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. 3. חברו את המכשיר בחזרה לאחר 5 דקות.	הודעה המכילה "D" או "E" מופיעה בתצוגה. 1. כבו את המכשיר. 2. נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. 3. חברו את המכשיר בחזרה לאחר 5 דקות.

תקלה	גורם ופתרון תקלות
הודעה המכילה "D" או "E" מופיעה בתצוגה.	4. אם ההודעה עדיין מופיעה, התקשרו לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.
נשמע צליל אזהרה ו-"התרעת דלת תא הקירור" מופיע.	דלת המכשיר פתוחה. סגרו את דלת המכשיר.
התראת הדלת מופעלת.	
נשמע צליל אזהרה ו-"התרעת דלת תא ההקפאה" מופיע.	דלת המכשיר פתוחה. סגרו את דלת המכשיר.
התראת הדלת מופעלת.	
נשמע צליל אזהרה ו-"התרעת טמפרטורה" מאיר.	סיבות שונות אפשריות. 1. הקישו על ✓. האזעקה תכובה.
התראת הטמפרטורה מופעלת.	2. כעבור שעות אחדות, בדקו אם תא ההקפאה הגיע שוב לטמפרטורה שנקבעה.
	הוכנסו כמויות גדולות של מזון טרי. אל תחרגו מיכולת ההקפאה המרבית. ← "יכולת הקפאה", עמוד 25
הטמפרטורה שונה מאוד מהערך שהוגדר.	סיבות שונות אפשריות. 1. כבו את המכשיר. 2. הדליקו את המכשיר בחזרה לאחר 5 דקות. אם הטמפרטורה גבוהה מדי, בדקו את הטמפרטורה שוב לאחר כמה שעות. אם הטמפרטורה נמוכה מדי, בדקו את הטמפרטורה שוב ביום הבא.
דליפת מים מהמכשיר.	חיבור המים או צינור המים לא אטומים. בדקו אם חיבורי המים מהודקים היטב ואם צינור המים תקין. במקרה הצורך החליפו את צינור המים.
ייצור קוביות הקרח נמוך.	המכשיר חובר רק לאחרונה. המתינו כ-4 שעות עד להכנת קוביות הקרח הראשונות.
	תא ההקפאה נפתח לעתים קרובות או לדמן ממושך. בדקו את הכנת קוביות הקרח כעבור כמה שעות.
	לחץ מים נמוך. בדקו את לחץ המים של מערכת אספקת המים או מערכת סינון מים חיצונית, כגון מערכת אוסמוזה הפוכה. חברו את המכשיר רק לחיבור מים עם לחץ מים מספק. ← עמוד 8
	פקק המעקף סתום. נקו את פקק המעקף. ← עמוד 29

גורם ופתרון תקלות	תקלה
מוצרי מזון או עצמים אחרים חוסמים את חיישן המפלס של מייצר קוביות הקרח. ◀ הסר את כל מוצרי המזון והעצמים ממגש קוביות הקרח.	ייצור קוביות הקרח נמוך.
תקלה במייצר קוביות הקרח. 1. כבו את המכשיר. 2. נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. 3. חברו את המכשיר בחזרה לאחר 5 דקות. 4. אם התקלה אינה נפתרת, התקשר לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.	
ייצור קוביות הקרח כבוי. ◀ הפעילו את הכנת קוביות הקרח. ← עמוד 28 אין אספקת מים. ◀ ודאו שישנה אספקת מים ושהברד הזווייתי בחיבור המים פתוח. במקרה הצורך הזמינו שרברב.	מייצר קוביות הקרח אינו פועל.
קיפול בצינור המים. ◀ כבו את אספקת המים וישרו את הקפל בצינור המים. במקרה הצורך החליפו את צינור המים.	
תקלה במייצר קוביות הקרח. 1. כבו את המכשיר. 2. נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. 3. חברו את המכשיר בחזרה לאחר 5 דקות. 4. אם התקלה אינה נפתרת, התקשר לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.	
אין תקלה. אחד המנועים פועל, לדוגמה יחידת הקירור או המאוורר. גד קירור זורם בצנרת. המנוע, המפסקים, השסתומים המגנטיים ושסתומי מים מופעלים או מכובים. ההפשרה האוטומטית מתבצעת. קוביות קרח נופלות למגש קוביות הקרח. אין צורך בנקיטת פעולה כלשהי.	המכשיר מפיק רעשי טרטור, זמזום, גרגור, קליק או רעידות.
המכשיר לא מאוזן. ◀ ישרו את המכשיר בעזרת פלס והרגליים המתברגות.	המכשיר עושה רעשים.
אביזרים רועדים או נתקעים. ◀ בדקו את האביזרים המתפרקים, ובמקרה הצורך חברו אותם מחדש.	
בקבוקים או כלים נוגעים אלה באלה. ◀ הרחיקו את הבקבוקים או הכלים מעט אלה מאלה.	

תקלה

גורם ופתרון תקלות

המכשיר עושה רעשים. הקפאה מהירה מופעלת. אין צורך בנקיטת פעולה כלשהי.



20.1 הפסקת חשמל

במהלך הפסקת חשמל הטמפרטורה במכשיר עולה, עקב כך מתקצר זמן האחסון ואיכות המזון המוקפא יורדת. במקרה של תקלה תוכלו למצוא באתר שלנו את זמני האחסון של המזון הקפוא בנתונים הטכניים של המכשיר שלכם.

הערות

- בזמן הפסקת חשמל יש לפתוח את המכשיר מעט ככול האפשר ואין לאחסן בתוכו מוצרי מזון נוספים.
- בדקו את איכות מוצרי המזון מיד בתום הפסקת החשמל.
 - השליכו לפח מוצרי מזון קפואים שהפשירו והגיעו לטמפרטורה מעל 5°C.
 - מוצרי מזון קפואים שהתחילו להפשיר יש לבשל או לטגן, ואז לצרוך או להקפיא אותם.

21 אחסון והשלכה לאשפה

21.1 הוצאת המכשיר משימוש

1. כבו את המכשיר.
2. נתקו את המכשיר מהחשמל.
3. נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
4. נתקו את המכשיר מחיבור המים.
5. הוציאו את כל מוצרי המזון.
6. בקו את המכשיר. ← עמוד 28
6. השאירו את דלת המכשיר פתוחה כדי שחלל הפנים יתאוויר.

21.2 השלכת מכשיר הישן

השלכה ידידותית לסביבה יכולה לסייע למחזר חומרי גלם יקרי ערך.

⚠ אזהרה

סכנה לנזק בריאותי!

- ילדים עלולים להילכד במכשיר ולהיקלע לסכנת חיים.
- ✦ אל תוציאו את המגירות ואת תאי האחסון מהמכשיר על מנת להקשות על הילדים את הטיפוס לתוכו.
- ✦ הרחיקו את הילדים מהמכשיר שיצא משימוש.

⚠ אזהרה

סכנת דליקה!

- במקרה של נזק לצינורות חומר קירור וגדים רעילים עלולים להיפלט ולהידלק.
- ✦ אין לפגוע בצינורות מעגל הקירור והבידוד.
- 1. נתקו את המכשיר מהחשמל.
- 2. חתכו את כבל החשמל.
- 3. השליכו את המכשיר לאשפה באופן ידידותי לסביבה.
- מידע לגבי אופני פינוי האשפה העדכניים ניתן לקבל אצל הסוחר, במועצה המקומית או בעירייה.

22 שירות לקוחות

חלקי חילוף מקוריים רלוונטיים לפעולה ניתן לקבל בהתאם לתקנת הדגם האקולוגי אצל שירות הלקוחות למשך לפחות 10 שנים החל בהכנסת המכשיר לפעולה בתוך האזור הכלכלי האירופי.

מידע מפורט על תקופת האחריות ותנאי האחריות בארצכם ניתן לקבל באמצעות קוד ה-QR שמופיע במסמך המצורף של פרטי ההתקשרות עם שירות הלקוחות ותנאי האחריות, דרך שירות הלקוחות שלנו, אצל הסוכן שלכם או באתר האינטרנט שלנו.

ניתן למצוא את פרטי ההתקשרות של שירות הלקוחות באמצעות קוד ה-QR שמופיע

במסמך המצורף של פרטי ההתקשרות ותנאי השירות או באתר האינטרנט שלנו.

22.1 מספר המוצר (E-Nr), ומספר הייצור (FD) ומספר הסדרה (Z-Nr).

בפניה לשירות הלקוחות, יהיה צורך במספר המוצר (E-Nr), במספר הייצור (FD) ובמספר המונה (Z-Nr), אותם ניתן למצוא בלוחית הדגם של המכשיר.

← "המכשיר", איור 1/16 עמוד 12
רשמו מספרים אלה כדי שתוכלו למצוא במהירות את נתוני המכשיר ואת מספר הטלפון של שירות הלקוחות.

23 מפרטים טכניים

מידע על חומר הקירור, נפח הקיבולת ונתונים טכניים נוספים תמצאו בלוחית הדירוג.

← "המכשיר", איור 1/16 עמוד 12
מוצר זה כולל מקור אור של דרגת יעילות אנרגיה E. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו. מוצר זה כולל מקור אור שני של דרגת יעילות אנרגיה E. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו. מוצר זה כולל מקור אור שלישי של דרגת יעילות אנרגיה E. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו.

מידע נוסף על הדגם שלכם תוכלו למצוא

באתר האינטרנט <https://eprel.ec.europa.eu/>¹ אתר אינטרנט זה מחובר למאגר נתוני המוצרים הרשמי של

24 הצהרת תאימות

BSH Hausgeräte GmbH מצהירה בזאת שהמכשיר שכולל פעולות Home Connect תואם לדרישות הבסיסיות ולכל ההוראות הרלוונטיות של הנחיה EU/2014/53.

האיחוד האירופי EPREL. אנא מלאו אחר ההנחיות לחיפוש הדגם. סימון הדגם מתקבל מהנתונים שלפני הלוכסן של מספר המוצר (E-Nr). שעל לוחית הדגם, לחלופין תוכלו למצוא את סימון הדגם גם בשורה הראשונה של תווית האנרגיה.

23.1 מידע לגבי תכנה פתוחה ותכנת קוד פתוח

מוצר זה כולל רכיבי תכנה, שהוגדרו ברישיון ע"י בעלי זכויות היוצרים כבעלי קוד חופשי או פתוח.

מידע הרישיון המתאים מצוי על מכשיר החשמל הביתי. ניתן לגשת למידע הרישיון המתאים גם באמצעות אפליקציית Home Connect: „פרופיל -> מידע משפטי-> מידע רישיון“.² תוכלו להוריד את מידע הרישיון גם באתר האינטרנט של המותג. (חפשו בבקשה באתר האינטרנט של המוצר את דגם המכשיר שלכם ותיעוד נוסף.) לחלופין תוכלו לקבל את המידע אצל ossrequest@bshg.com או אצל BSH Hausgeräte GmbH, Carl-Wery-Str. 34, D-81739 München. קוד המקור המתאים יהיה זמין עבורכם לבקשתכם.

שלחו בקשה אל ossrequest@bshg.com או אל BSH Hausgeräte GmbH, Carl-Wery-Str. 34, D-81739 München. הנושא: „OSSREQUEST“
חשבון יישלח אליכם עבור עלות הבקשה. הצעה זו תקפה למשך שלוש שנים החל בתאריך הרכישה או לפחות לתקופה בה אנו מציעים תמיכה וחלקי חילוף עבור המכשיר המתאים.

¹ תקף עבור האיזור הכלכלי האירופי בלבד

² בהתאם לאבזור המכשיר

ניתן למצוא באינטרנט את הצהרת התאימות המפורטת RED באתר www.gaggenau.com בעמוד המוצר של המכשיר שלכם תחת מסמכים נוספים.



ערוץ 2.4GHz: (2400–2483.5 MHz) מקס' 100mW
ערוץ 5GHz (5150–5350 MHz + 5470–5725 MHz): מקס' 150 mW

ES	EL	IE	EE	DE	DK	CZ	BG	BE	
HU	LU	LT	LV	LI	CY	IT	HR	FR	
FI	SK	SI	RO	PT	PL	AT	NL	MT	
			UK (NI)	IS	TR	CH	NO	SE	
5GHz WLAN (Wi-Fi): לשימוש בחללים סגורים בלבד.									
UA	UK	RS	MK	ME	MD	BA	AL		
5GHz WLAN (Wi-Fi): לשימוש בחללים סגורים בלבד.									

**You can find additional information and explanations online.
Scan the QR code on the title page.**



Table of contents

1 Safety	39	6.6 Door tray	51
1.1 General information	39	6.7 Ice cube container	51
1.2 Intended use	40	6.8 Camera	51
1.3 Restriction on user group	40	6.9 Odour filter	52
1.4 Safe transport	40	6.10 Accessories	52
1.5 Safe installation	41	7 Before using for the first time ..	53
1.6 Safe use	42	7.1 Performing initial start-up	53
1.7 Damaged appliance	44	8 Basic operation	53
2 Preventing material damage	45	8.1 Switching on the appliance	53
3 Environmental protection and saving energy	45	8.2 Operating tips	53
3.1 Disposing of packaging	45	8.3 Switching off the appliance	54
3.2 Saving energy	46	8.4 Setting the temperature	54
4 Installation and connection	46	8.5 Cold storage compartment storage setting	54
4.1 Scope of delivery	46	8.6 Keylock	54
4.2 Criteria for the installation location	46	9 Basic settings	54
4.3 Installing the appliance	47	9.1 Changing the basic settings ...	54
4.4 Preparing the appliance for the first time	47	9.2 Overview of the basic settings	55
4.5 Connecting the appliance to the drinking water connection	47	10 Additional functions	57
4.6 Connecting the appliance to the electricity supply	47	10.1 Fast cooling	57
5 Familiarising yourself with your appliance	48	10.2 Automatic Fast freezing	58
5.1 Appliance	48	10.3 Manual Fast freezing	58
5.2 Control panel	49	10.4 Holiday mode	59
6 Features	50	10.5 Door opening aid	59
6.1 Shelf	50	10.6 Rest mode	59
6.2 Storage container	50	11 Alarm	60
6.3 Cold storage container	51	11.1 Door alarm	60
6.4 Frozen food pull-out container	51	11.2 Temperature alarm	60
6.5 Suspended frozen food container	51	12 Home Connect	60
		12.1 Setting up Home Connect	61
		12.2 Installing updates for the Home Connect software	61
		12.3 Resetting Home Connect settings	61
		12.4 Remote diagnostics	61

12.5 Data protection	61	18 Defrosting	67
12.6 Status of the Home Connect connection	62	18.1 Defrosting in the refrigerator compartment	67
13 Service settings	62	18.2 Defrosting in the cold storage compartment	68
13.1 Changing service settings	62	18.3 Defrosting in the freezer compartment	68
13.2 Overview of the service settings	62	19 Cleaning and servicing	68
14 Refrigerator compartment	63	19.1 Care instructions for stainless steel surfaces	68
14.1 Tips for storing food in the refrigerator compartment	63	19.2 Preparing the appliance for cleaning	68
14.2 Chill zones in the refrigerator compartment	64	19.3 Cleaning the appliance	68
15 Cold storage compartment	64	19.4 Cleaning the camera	69
15.1 Storage recommendations for the cold storage compartment	64	19.5 Cleaning the bypass cap	69
15.2 Storage times in the cold storage compartment at 0 °C (32 °F)	64	19.6 Removing the fittings	69
16 Freezer compartment	65	19.7 Replacing the odour filter	70
16.1 Freezing capacity	65	20 Troubleshooting	70
16.2 Fully utilising the freezer compartment volume	65	20.1 Power failure	75
16.3 Tips for storing food in the freezer compartment	65	21 Storage and disposal	76
16.4 Tips for freezing fresh food ...	65	21.1 Taking the appliance out of operation	76
16.5 Shelf life of frozen food at -18 °C (0 °F)	66	21.2 Disposing of old appliance ...	76
16.6 Defrosting methods for frozen food	66	22 Customer Service	76
17 Water system	66	22.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)	77
17.1 Bypass cap	66	23 Technical data	77
17.2 Ice cube maker	67	23.1 Information regarding Free and Open Source Software ..	77
		24 Declaration of Conformity	78



1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.

- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- for chilling and freezing food and for making ice cubes.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 2000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Children above the age of three years old and younger than eight years old may load and unload the refrigerating appliance.

1.4 Safe transport

⚠ WARNING – Risk of tipping!

The appliance is very top-heavy and may tip over.

- ▶ The appliance must be transported by two or more people.
- ▶ Do not remove the appliance from the pallet until it is ready for installation.
- ▶ Keep the doors and drawer closed until the appliance is secured in the built-in niche.

⚠ WARNING – Risk of injury!

The heavy weight of the appliance may result in injury when lifted.

- ▶ Do not lift the appliance on your own.

1.5 Safe installation

WARNING – Risk of electric shock!

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with heat sources.

WARNING – Risk of explosion!

If the appliance's ventilation openings are closed off, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

- ▶ Keep ventilation openings in the appliance casing or in the integrated casing clear of obstruction.

WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

Portable multiple socket strips or portable power supply units may overheat and cause a fire.

- ▶ Do not place portable multiple socket strips or power supply units on the back of the appliance.

⚠ WARNING – Risk of tipping!

The appliance is very top-heavy and may tip over.

- ▶ The appliance must be installed by two or more people as soon as it is no longer secured and is removed from the pallet.
- ▶ Secure the unit using the supplied anti-tip bracket.
- ▶ Do not leave the appliance unattended during installation.

⚠ CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ▶ Wear protective gloves.

1.6 Safe use

⚠ WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

⚠ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

⚠ WARNING – Risk of explosion!

If the cooling circuit is damaged, flammable refrigerant may escape and explode.

- ▶ To accelerate the defrosting process, do not use any other mechanical devices or means other than those recommended by the manufacturer.

- ▶ If food is stuck to the freezer compartment, loosen it with a blunt object such as the handle of a wooden spoon.

Products which contain flammable propellants and explosive substances may explode, e.g. spray cans.

- ▶ Do not store products which contain flammable propellants (e.g. spray cans) or explosive substances in the appliance.

WARNING – Risk of fire!

Electrical devices within the appliance may cause a fire, e.g. heaters or electric ice makers.

- ▶ Do not operate electrical devices within the appliance.

WARNING – Risk of injury!

Containers that contain carbonated drinks may burst.

- ▶ Do not store containers that contain carbonated drinks in the cold storage compartment or in the variable-temperature compartment below 1 °C (34 °F).
- ▶ Do not store containers that contain carbonated drinks in the freezer compartment.

Injury to the eyes caused by escaping flammable refrigerant and hazardous gases.

- ▶ Do not damage the tubes of the refrigerant circuit or the insulation.

WARNING – Risk of cold burns!

Contact with frozen food and cold surfaces may cause burns by refrigeration.

- ▶ Never put frozen food straight from the freezer compartment into your mouth.
- ▶ Avoid prolonged contact of the skin with frozen food, ice and surfaces in the freezer compartment.

CAUTION – Risk of harm to health!

To prevent food from being contaminated, you must observe the following instructions.

- ▶ If the door is open for an extended period of time, this may lead to a considerable temperature increase in the compartments of the appliance.
- ▶ Regularly clean the surfaces that may come into contact with food and accessible drain systems.

- ▶ Store raw meat and fish in suitable containers in the refrigerating appliance so that they do not touch or drip on other food.
- ▶ If the fridge/freezer is empty for an extended period of time, switch off the appliance, defrost it, clean it and leave the door open to prevent the formation of mould.

Metal or metal-style parts in the appliance may contain aluminium. If acidic food comes into contact with aluminium in the appliance, aluminium foil ions may pass into the food.

- ▶ Do not consume soiled food.

1.7 Damaged appliance

WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
- ▶ Call customer service. → *Page 76*

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.

WARNING – Risk of fire!



If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- ▶ Keep naked flames and ignition sources away from the appliance.
- ▶ Ventilate the room.
- ▶ Switch off the appliance.

- ▶ Unplug the mains plug from the mains or switch off the circuit breaker in the fuse box.
- ▶ Call customer service. → *Page 76*

2 Preventing material damage

ATTENTION

The high weight of the appliance or, if not rolling freely, the appliance's castors may damage the floor when the appliance is moved.

- ▶ Transport the appliance using a sack truck.
- ▶ Use floor protection when moving the appliance, and do not move it in a zigzag fashion.

When the appliance door is closed, an open door pillar may damage the appliance.

- ▶ Never open the door pillar manually.
- ▶ If the door pillar has been opened, close it before closing the appliance door.

Using the base, runners or appliance doors as a seat surface or climbing surface may damage the appliance.

- ▶ Do not stand or support yourself on the base, runners or doors.

If the water pressure is too high or too low, the appliance may not be able to operate properly.

- ▶ Make sure that the water pressure in the water supply system is at least 200 kPa (2 bar) and max. 800 kPa (8 bar).
- ▶ If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the drinking water connection and the hose set of the appliance.

Modified or damaged water hoses may result in material damage and damage to the appliance.

- ▶ Never kink, crush, modify or cut through water hoses.
- ▶ Only use the water hoses supplied with the appliance or genuine spare hoses.
- ▶ Never re-use water hoses that have been used before.
- ▶ Never pull on the water hose on the rear panel of the appliance.

Contamination with oil or fat may cause plastic parts and door seals to become porous.

- ▶ Keep plastic parts and door seals free of oil and grease.

Metal or metal-style parts in the appliance may contain aluminium. When aluminium comes into contact with acidic foods, it corrodes and discolours.

- ▶ Only store packaged food in the appliance.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discoloured.

- ▶ Never clean fittings and accessory in the dishwasher.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Selecting the installation location

- Keep the appliance out of direct sunlight.
- Install the appliance as far away as possible from heating elements, cookers and other heat sources:
 - Maintain a 30 mm clearance to electric or gas cookers.
 - Maintain a 300 mm clearance to oil or solid-fuel cookers.
- Never cover or block the external ventilation openings.

Saving energy during use

Note: The arrangement of the fittings does not affect the energy consumption of the appliance.

- Open the appliance only briefly and then close it carefully.
- Never cover or block the interior ventilation openings or the exterior ventilation openings.
- Transport purchased food in a cool bag and place in the appliance quickly.
- Allow warm food and drinks to cool down before storing them.
- Thaw frozen food in the refrigerator compartment to utilise the low temperature of the food.
- Always leave some space between the food and to the back panel.
- Vacuum the external ventilation grilles when they are dusty.

4 Installation and connection

4.1 Scope of delivery

After unpacking all parts, check for any transport damage and for completeness of delivery.

If you have any complaints, contact your dealer or our after-sales service → *Page 76*.

The delivery consists of the following:

- Equipment and accessories¹
- Installation material
- Installation instructions
- User manual
- Customer service directory
- Warranty enclosure²
- Energy label
- Information on energy consumption and noises
- Information about Home Connect

4.2 Criteria for the installation location

WARNING

Risk of explosion!

If the appliance is in a space that is too small, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

- Only install the appliance in a space with a volume of at least 1 m³ per 8 g refrigerant. The volume of refrigerant is indicated on the rating plate.

→ "Appliance", Fig. **1/16**
Page 49

The weight of the appliance ex works may be up to 225 kg depending on the model.

¹ Depending on the appliance specifications

² Not in all countries

The subfloor must be sufficiently stable to bear the weight of the appliance.

This refrigerator is intended for use at ambient temperatures of 10 °C to 43 °C.

The appliance is fully functional within the permitted room temperature.

If the appliance is operated at colder room temperatures, the appliance will not be damaged up to a room temperature of 5 °C.

4.3 Installing the appliance

- ▶ Install the appliance in accordance with the enclosed installation instructions.

4.4 Preparing the appliance for the first time

1. Remove the informative material.
2. Remove the protective foil and transit bolts, e.g. remove the adhesive strips and carton.
3. Clean the appliance for the first time. → *Page 68*

4.5 Connecting the appliance to the drinking water connection

Requirements

- A corner valve must be installed on the water connection and be

freely accessible following installation of the appliance.

- The water connection is checked and is of drinking water quality.
1. Draw mains water from the domestic drinking water connection until the water is no longer cloudy and contains no deposits. If the drinking water is still cloudy or contains deposits, install an external water filter system.
 2. Install the water hose according to the enclosed installation instructions on the appliance.

4.6 Connecting the appliance to the electricity supply

1. Insert the appliance plug of the power cord into the appliance.
2. Insert the mains plug of the appliance's power cable in a socket nearby.

The connection data of the appliance can be found on the rating plate.


→ "Appliance", Fig. **1** ✓ **16**
Page 49

3. Check the mains plug is inserted properly.
- ✓ The appliance is now ready for use.

5 Familiarising yourself with your appliance

5.1 Appliance

You can find an overview of the parts of your appliance here.

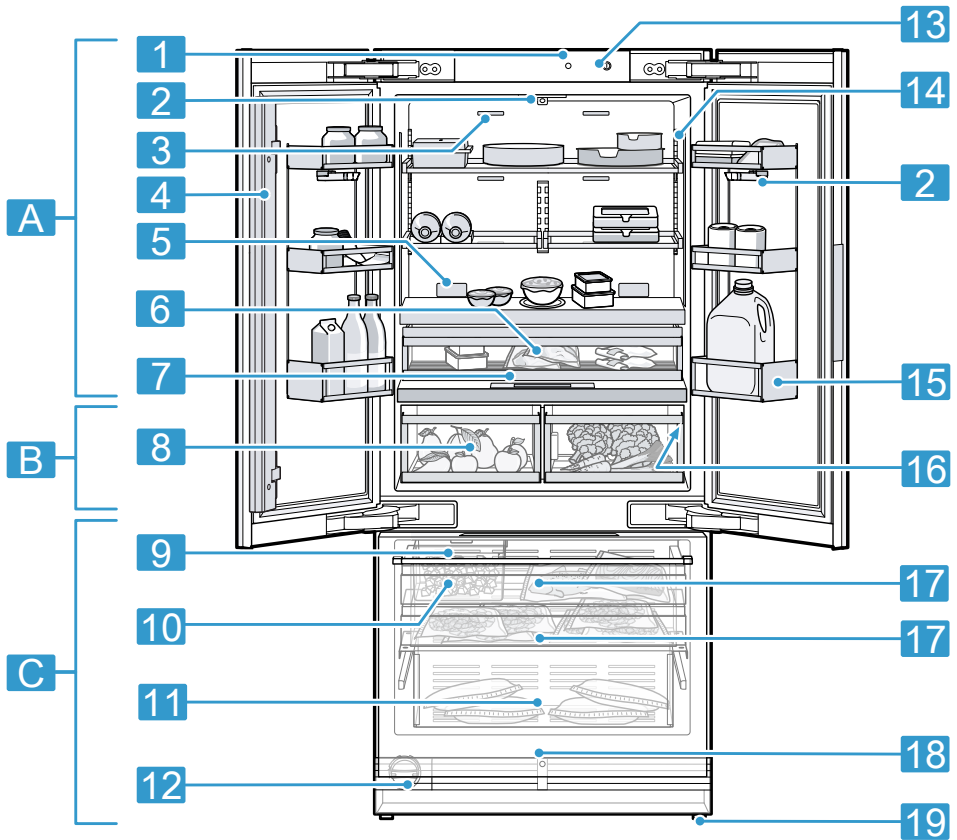

1

Deviations between your appliance and the diagrams may differ with regard to their features and size.

A Refrigerator compartment
→ Page 63

B Cold storage compartment
→ Page 64

C Freezer compartment
→ Page 65


1 Door opening aid (refrigerator compartment)

2	Camera
3	Inner ventilation openings (refrigerator compartment)
4	Door pillar with condensation protection → <i>Page 45</i>
5	Odour filter → <i>Page 52</i>
6	Storage container → <i>Page 50</i>
7	Control panel → <i>Page 49</i>
8	Cold storage container → <i>Page 51</i>
9	Ice cube maker → <i>Page 67</i>
10	Ice cube container → <i>Page 51</i>

11	Suspended frozen food container → <i>Page 51</i>
12	Bypass cap
13	Main switch
14	Interior lighting
15	Door tray for large bottles → <i>Page 51</i>
16	Rating plate → <i>Page 77</i>
17	Frozen food pull-out container → <i>Page 51</i>
18	Door opening aid (freezer compartment)
19	Screw foot

5.2 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

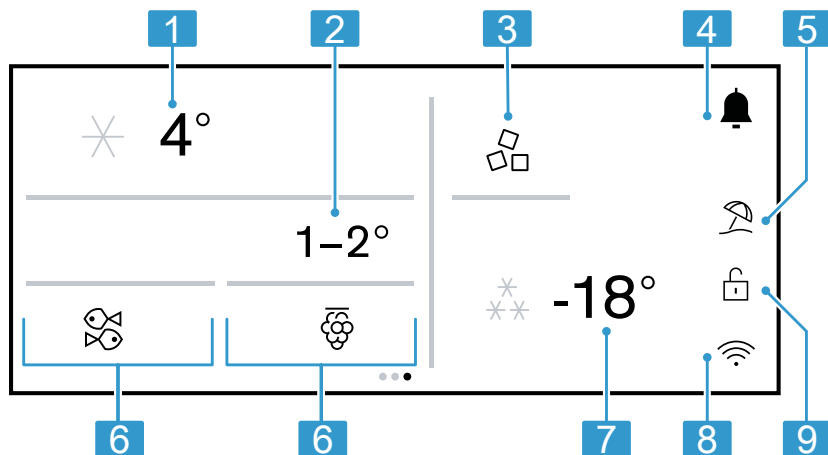

2	
1	Allows the refrigerator compartment to be set.
2	Displays the temperature of the storage container in °C or °F.
3	Allows ice cube production to be set.

4	🔔 opens the notification centre.
5	Displays the set mode.
6	Allows the cold storage compartment to be set.

-
- 7** Allows the freezer compartment to be set.
-

Operating logic

Some areas of the display respond to touch. You can activate settings by touching the buttons. The activated settings are highlighted on the display. You can change or deactivate the activated settings by repeatedly pressing on the relevant buttons on the display.

ATTENTION

Pressing on the display with force may cause damage.

- ▶ Do not apply heavy pressure on the display.
- ▶ Do not press on the display using pointed or sharp objects.

Symbol	Description
ⓘ	Display additional information
⦿	Switch on the function
◐	Switch off the function

6 Features

The features of your appliance depend on the model.

-
- 8** Shows the status of Home Connect, for example whether Home Connect is switched on or off.
-
- 9** Switches the display's button lock on or off.
-

6.1 Shelf

ATTENTION


If fitted at an angle, the hooks on the shelf can scratch the rear panel of the refrigerator compartment.

- ▶ Ensure that the shelf is horizontal and that the hooks are properly fitted in place.

To vary the shelf as required, you can remove the shelf and re-insert it elsewhere.

→ *"Removing the shelf", Page 69*

Note: To avoid impeding the circulation of air, do not cover the inner ventilation openings.

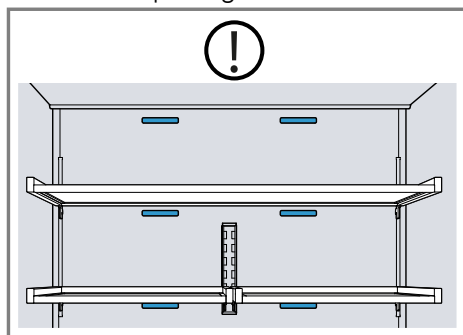

6.2 Storage container

The temperatures in the storage container are lower than in the refrigerator compartment. Temperatures below 0 °C may occur occasionally. In order to reach temperatures close to 0 °C in the storage container, set the refrigerator compartment temperature to 2 °C.

Use the lower temperatures in the storage container to store highly per-

ishable food, e.g. fish, meat and sausages.

6.3 Cold storage container

To automatically set the cold storage container to the right humidity and temperature for your food, use the different cold storage container storage settings.

Store fresh fruit and vegetables loose in the cold storage container.

Cover any chopped fruit and vegetables, or store in air-tight packaging. For hygiene reasons, do not store fruit and vegetables in a cold storage container with meat and fish.

Condensation may form in the cold storage container depending on the type and quantity of products stored. Remove the condensation with a dry cloth.

To ensure that the quality and aroma are retained, store fruit and vegetables that are sensitive to cold outside of the appliance at temperatures of approx. 8 °C (46 °F) to 12 °C (54 °F), e.g. pineapple, bananas, citrus fruits, cucumbers, courgettes, peppers, tomatoes and potatoes.

6.4 Frozen food pull-out container

In order to achieve an improved overview and to remove frozen food more quickly, remove frozen food pull-out container.

6.5 Suspended frozen food container

Store large frozen items in the suspended frozen food container.

6.6 Door tray

To adjust the door tray as required, you can remove the door tray and re-insert elsewhere.

→ *"Removing door tray", Page 69*

6.7 Ice cube container

If ice cube production is switched on, the ice cubes are automatically stored in the ice storage container.

ATTENTION

The ice cube maker may become blocked or damaged by food or objects stored in the ice storage container.

- ▶ Never store food or objects in the ice storage container.

Note: To prevent the ice cube container from being overfilled, do not manually distribute the ice cubes throughout the ice cube container.

Tip: To ensure that no ice cubes fall into the freezer compartment from the ice cube container, do not slam the freezer compartment drawer shut.

6.8 Camera

Each time the door is closed, the cameras take a photo of the refrigerator compartment, the cold storage compartment and the inside of the refrigerator compartment doors. You can call up the photos using the Home Connect app and a mobile device. Activating the cameras

Note: Close the appliance door slowly so that the cameras are able to take high-quality photos. If you close the appliance door too quickly, the photos may be blurred.

The photos may also be unclear if the camera is dirty.

→ *"Cleaning the camera", Page 69*

6.9 Odour filter

The odour filter filters odours in the refrigerator compartment and can be replaced if required.

→ *"Replacing the odour filter", Page 70*

Change the odour filter every year. This keeps the filter quality permanently high.

6.10 Accessories


Use original accessories. These have been made especially for your appliance.

The accessories for your appliance depend on the model.

Anti-slip mat

The anti-slip mat prevents bottles and food from slipping.

Condensation may form on the anti-slip mat depending on the type and quantity of food stored. Where necessary, remove the anti-slip mat and wipe away the condensation with a dry cloth.

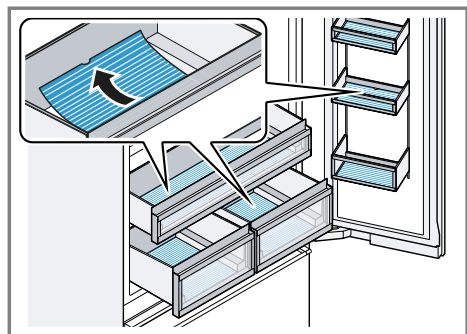


Egg container

Store eggs safely in the egg container.

Variable bottle shelf

Store bottles securely on the variable bottle shelf.

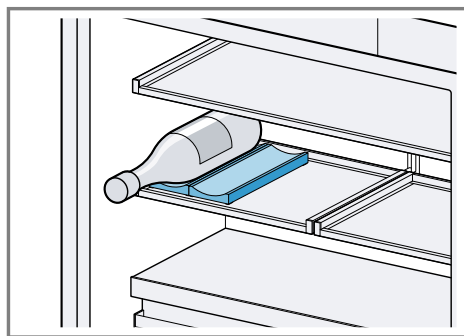

Ethylene absorber

For important safety instructions and information about installation and use, see the enclosed installation instructions for the ethylene absorber. The ethylene absorber slows down the ripening of ethylene-sensitive fruit and vegetables to keep them fresher for longer.

Installing the ethylene absorber

- Install the ethylene absorber in accordance with the installation instructions for the ethylene absorber.

Using the refill set

1. Install the components of the refill set in accordance with the installation instructions for the ethylene absorber.
2. Replace the bags at least every 6 months after resetting.


Note: Refill sets can be purchased from customer service or our website.

Ice scoop

You can use the ice scoop to remove a portion of ice cubes.

en Before using for the first time

Tip: Position the ice shovel on the front side of the ice storage container.

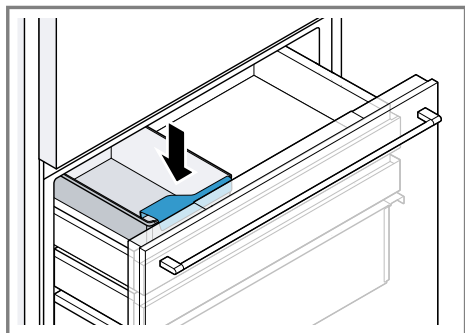

7 Before using for the first time

7.1 Performing initial start-up

Requirements

- The appliance is installed in accordance with the enclosed installation instructions.
- The appliance is connected to the electricity supply. → *Page 47*

1. Switch on the appliance at the main switch.
→ *"Appliance", Fig. 1/13 Page 49*
2. Close the appliance doors, wait 3 minutes and reopen them.
3. Select a language and touch >.
4. Touch > to confirm the information on the display.
5. To activate the door-opening aid, touch > and follow the instructions on the display.
6. To change the water filter type, touch "Change filter type" and follow the instructions on the display.
7. Follow the instructions on the display for checking the water connection, then touch >.
8. To confirm the summary, touch >.

9. To complete the initialisation process, touch ✓.
- ✓ The appliance restarts and the display shows an animation.
10. As an option, touch  to select the required language, then touch ✓.
11. Touch >.
12. To set up Home Connect, press > to start "Home Connect assistant" and follow the instructions on the display.
13. **Note:** If you skip "Home Connect assistant", further manual settings appear on the display.
 - ▶ Select the temperature unit "°C" or "°F".
 - ▶ Select the time format "12" or "24".
 - ▶ Set the time and touch >.
 - ▶ To confirm oxidation protection, press >.
 - ▶ Press > to start the ethylene absorber installation and follow the instructions on the display.
14. Touch > to confirm the information on the display.
15. Press ✓ to finalise the initial start-up.

8 Basic operation

8.1 Switching on the appliance

1. Switch on the appliance at the main switch.
→ *"Appliance", Fig. 1/13 Page 49*
- ✓ The appliance begins to cool.
2. Set the required temperature.
→ *Page 54*

8.2 Operating tips

- Once you have switched on the appliance, the set temperature is only reached after several hours.

Do not put any food in the appliance until the set temperature has been reached.

- The front and side panels of the housing heat up occasionally. This prevents condensation from forming.
- When closing the door, make sure that the door is not blocked by stored items.
- When you close the door, a vacuum may be created. The door is then difficult to open again. Wait a moment until the vacuum is offset.
- The temperature in the appliance varies due to the following conditions:
 - How often the appliance is opened
 - Load capacity
 - Temperature of newly stored food
 - Ambient temperature
 - Direct sunlight

8.3 Switching off the appliance

- Switch off the appliance at the main switch.
→ "Appliance", Fig. **1**/13 Page 49

8.4 Setting the temperature

Setting the refrigerator compartment temperature

1. Touch the temperature display (refrigerator compartment).
2. Swipe to the required temperature. The recommended temperature in the refrigerator compartment is 4 °C (39 °F).

Setting the freezer compartment temperature

1. Touch the temperature display (freezer compartment).
2. Swipe to the required temperature. The recommended temperature in the freezer compartment is -18 °C (0 °F).

8.5 Cold storage compartment storage setting

You can set the temperature and humidity of the cold storage container using predefined storage settings.

Tip: Further settings are available in the Home Connect app.

Setting the cold storage compartment storage setting

1. Touch the cold storage compartment storage setting.
2. Swipe to the required storage setting and confirm using <.

8.6 Keylock

The keylock prevents the appliance from being operated accidentally or incorrectly while running.

Note: You can permanently activate or deactivate the automatic button lock.

Switching on the keylock

- Press and hold  for 2 seconds.
- ✓  lights up.

Switching off the keylock

- Press and hold  for 2 seconds.

9 Basic settings

9.1 Changing the basic settings

1. Swipe to "Settings".

2. Swipe to the required basic setting and touch it.
3. Change the basic setting.

9.2 Overview of the basic settings

Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

🎵 "Sounds"

Setting	Selection	Description
Interaction sounds	"Stand-ard"/"Loud"/"Quiet"/"Off"	Switch on, set or switch off the volume for the interaction sounds.
Notification sounds	"Stand-ard"/"Loud"/"Quiet"/"Off"	Switch on, set or switch off the volume for the notification sounds.
Process sounds	"Stand-ard"/"Loud"/"Quiet"/"Off" 30 "s"/3 "min"/10 "min"	Switch on, set or switch off the volume. Set the duration.

💡 "Interior lighting"

Setting	Selection	Description
Brightness	From "1" to "6" 	Set the interior lighting manually. Switch the automatic interior lighting on or off.
Light interaction		Switch the adjusted lighting on or off when operating the appliance.

🔔 "Notifications"

Setting	Selection	Description
Info layer		Switch the information on the display on or off.
Pop-up hints		Switch the further information on the display on or off.
Hidden notifications	Reset	Display hidden notifications again.

"Language"

Setting	Selection	Description
Language	See the information on the display.	Select the menu language.

"Time & Units"

Setting	Selection	Description
Time	See the information on the display. 	Follow the instructions on the display and set the time. Switch the automatically set time on or off.
Time format	"12"/"24"	Set the time format.
Temperature unit	"°F"/"°C"	Set the temperature unit.

"Advanced"

Setting	Selection	Description
Demo mode		Switch the demo mode on or off. The appliance does not cool in demo mode. Note: Demo mode is only available for a limited time after the appliance is switched on.
Display rest mode		Switch rest mode on or off.
Factory settings	Restore	Reset the appliance to the factory settings.

"Appliance"

Setting	Selection	Description
Automatic fast freezing		Activate or deactivate automatic Fast freezing. → "Automatic Fast freezing", Page 58
Door opening assist	See the information on the display.	Switch the door-opening aid on or off. Door opening aid → Page 59

Setting	Selection	Description
Introduction to the appliance	Start	Get to know the appliance and personalise settings.

 "Home network"

Setting	Selection	Description
WiFi		Switch the "Wi-Fi" on or off.
Home Connect assistant	See the information on the display.	Set up Home Connect. → <i>Page 61</i>
Camera		Switch the cameras on or off. → <i>"Camera", Page 51</i>
Network information	See the information on the display.	Displays the Home Connect network information.
Network credential reset	Confirm	Reset the Home Connect settings.

 "Display"

Setting	Selection	Description
Brightness	From "1" to "6" 	Set the display lighting manually. Switch the automatic display lighting on or off.
Simplified home screen		Switch standby mode on or off. Standby mode shows reduced content on the display and high-lights open drawers.
Child lock	See the information on the display.	Switch the "Child lock" on or off.

10 Additional functions

Find out which additional functions can be used for your appliance. Additional functions can be set via the Home Connect app.

10.1 Fast cooling

With Fast cooling, the refrigerator compartment cools as cold as possible.
Switch on Fast cooling before placing large quantities of food in the refrigerator compartment.

Note: When Fast cooling is switched on, increased noise may occur.

Switching on Fast cooling

1. Touch the temperature display (refrigerator compartment).
2. Touch ✖.
- ✓ ✖ lights up in the temperature display (refrigerator compartment).

Note: After approx. 6 hours, the appliance switches to normal operation.

Switching off Fast cooling

1. Touch the temperature display (refrigerator compartment).
2. Touch ✖.
- ✓ ✖ goes out on the temperature display (refrigerator compartment).
- ✓ The previously set temperature is displayed.

10.2 Automatic Fast freezing

With automatic Fast freezing, the freezer compartment cools down to a much lower temperature than in normal mode. This freezes food more quickly.

The automatic Fast freezing switches on if you place fresh food in the suspended frozen food container, starting from the right-hand side.

The automatic Fast freezing is activated at the factory. You can deactivate the automatic Fast freezing. If the automatic Fast freezing is switched on, ** lights up and increased noise may occur.

After operation, the appliance switches from automatic Fast freezing to normal operation.

Note: You can find out how to activate and deactivate automatic Fast freezing in the basic settings.

→ Page 56

Cancelling automatic Fast freezing

1. Touch the temperature display (freezer compartment).
2. Touch **.
- ✓ ** goes out on the temperature display (freezer compartment).
- ✓ The previously set temperature is displayed.

10.3 Manual Fast freezing

With Fast freezing, the freezer compartment cools as cold as possible. Switch on Fast freezing four to six hours before placing food weighing 2 kg or more into the freezer compartment.

Use Fast freezing to accelerate ice cube production.

In order to utilise the freezer capacity, use Fast freezing.

→ "Prerequisites for freezing capacity", Page 65

Note: When Fast freezing is switched on, increased noise may occur.

Switching on manual Fast freezing

1. Touch the temperature display (freezer compartment).
2. Touch **.
- ✓ ** lights up in the temperature display (freezer compartment).

Note: After approx. 54 hours, the appliance switches to normal operation.

Switching off manual Fast freezing

1. Touch the temperature display (freezer compartment).
2. Touch **.
- ✓ ** goes out on the temperature display (freezer compartment).
- ✓ The previously set temperature is displayed.

10.4 Holiday mode

If you are going to be away for a long time, you can switch on energy-saving holiday mode on the appliance.

⚠ CAUTION

Risk of harm to health!

The refrigerator compartment heats up while the holiday mode is switched on. The increased temperature may cause bacteria to increase and spoil the food.

- ▶ When the holiday mode is switched on, do not store any food in the refrigerator compartment.

The appliance automatically sets the temperatures.

Refrigerator compartment	14 °C (58 °F)
Cold storage compartment	Temperature remains unchanged
Freezer compartment	Temperature remains unchanged

Notes

- While the holiday mode is activated, ice cube production is switched off.
- You can find out how to switch on holiday mode in the service settings. → *Page 63*

10.5 Door opening aid

The door-opening aid supports you in opening the door.

Note: You can find out how to switch the door-opening aid on or off in the basic settings. → *Page 56*

Opening the door using the door-opening aid

ATTENTION

Repeatedly closing the door prematurely may lead to wear or failure of the door-opening aid.
Never close the door while the door-opening aid is extended.

- ▶ If you have nevertheless closed the door, leave it closed for 5 minutes. The door-opening aid is realigned.
1. Push the door in the middle.
 - ✓ The door-opening aid extends and opens the door slightly.
 2. Manually open the door.
If you do not open the door any further within 3 seconds, the door-opening aid retracts and the door closes.

10.6 Rest mode

The rest mode switches off all non-essential functions.

During rest mode, the following functions are switched off:

- Fast cooling
- Automatic Fast freezing and manual Fast freezing
- Alarm
- Ice cube production
- Interior lighting
- Signal tones
- Messages on the control panel

Notes

- The brightness of the control panel lighting is reduced during the rest mode.
- You can find out how to switch on rest mode in the basic settings. → *Page 56*

11 Alarm

11.1 Door alarm

If the appliance door is open for a while, the door alarm switches on. A signal tone sounds and 🔔 "Door alarm cooling and freezer compartment" appears in the display.

Switching off the door alarm

- ▶ Close the appliance door or touch 🔔.
- ✓ The warning tone is switched off.

11.2 Temperature alarm

If the freezer compartment becomes too warm, the temperature alarm is switched on.

A warning tone sounds and 🔔 "Temperature alarm" lights up.

⚠ CAUTION

Risk of harm to health!

During the thawing process, bacteria may multiply and spoil the frozen food.

- ▶ Do not refreeze food after it has been defrosted or started to defrost.
- ▶ Refreeze food only after cooking.
- ▶ These items should no longer be stored for the maximum storage period.

The temperature alarm can be switched on in the following cases:

- The appliance is switched on.
Do not store any food until the appliance has reached the set temperature.
- Large quantities of fresh food are being placed inside.

Switch on Fast freezing before placing large quantities of food in the appliance.

- The freezer compartment door is open for too long.
Check whether the frozen food has defrosted or thawed.

Switching off the temperature alarm

- ▶ Touch ✓.
- ✓ The warning tone is switched off.
- ✓ The display indicates the warmest temperature reached in the freezer compartment. The display will then indicate the set temperature again.
- ✓ From this time on, the warmest temperature is measured again and saved.

12 Home Connect

This appliance is network-capable.

Connect your appliance to a mobile device to control its functions via the Home Connect app.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of the Home Connect services in your country. You can find information about this at: www.home-connect.com.

To be able to use Home Connect, you must first set up the connection to the WLAN home network (Wi-Fi¹) and to the Home Connect app.

After switching on the appliance, wait at least 2 minutes until internal device initialisation is complete. Only then should you set up Home Connect. The Home Connect app guides you through the entire login process. Fol-

¹ Wi-Fi is a registered trademark of the Wi-Fi Alliance.

low the instructions, noting the information in the Home Connect app.

Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.
→ *"Safety", Page 39*
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

12.1 Setting up Home Connect

Requirement: The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.

1. Scan the following QR code.



You can install the Home Connect app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect app.

12.2 Installing updates for the Home Connect software

Note: If an update of the Home Connect software is available, a message appears in the Home Connect app.

- To install the update for the Home Connect software, follow the

instructions in the Home Connect app.

- ✓ The control panel is partially locked during the installation.

12.3 Resetting Home Connect settings

If your appliance experiences connection problems with the WLAN home network (Wi-Fi) or your appliance wants to log into a different WLAN home network (Wi-Fi), you can reset the Home Connect settings.

Note: You can find out how to reset the Home Connect settings in the basic settings. → *Page 55*

12.4 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

Tip: For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: *www.home-connect.com*.

12.5 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the in-

stalled Wi-Fi communication module).

- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

Notes

- Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.
- It is possible that users, persons or spaces outside of the appliance may be captured by the cameras and therefore displayed in the Home Connect app. Such photos are processed in the Home Connect system for the purpose of provision in the Home Connect app. Information on data processing can be retrieved in the Home Connect app.

13.2 Overview of the service settings

This is where you can find an overview of the service settings.

Quick guide

Setting	Selection	Description
Cooling drawer removal	See the information on the display.	Shows the step-by-step instructions on the display. Touch the required instructions and follow the
Upper freezer drawers removal		
Particle water filter cleaning		

12.6 Status of the Home Connect connection

This is where you will find an overview of the status of the Home Connect connection.

Symbol	Description
	The appliance is connected to the Home Connect app.
	The appliance is not connected to the Home Connect app.
	The appliance is not connected to the Wi-Fi home network.
	The remote diagnostics is activated.

13 Service settings

You can implement various service settings.

13.1 Changing service settings

1. Swipe to "Modes & Service".
2. Swipe to and touch the required service setting.
3. Change the service setting.

Setting	Selection	Description
Charcoal water filter re- placement		instructions on the dis- play.

Holiday mode

Setting	Selection	Description
Holiday mode		Switch holiday mode on or off. → "Holiday mode", Page 59

Filter management

Setting	Selection	Description
Water filter saturation	See the information on the display.	Displays the water filter status.
Air filter saturation		Displays the odour filter status.
Ethylene absorber satur- ation		Displays the ethylene ab- sorber status.

Appliance information

Setting	Selection	Description
E-Number: Serial number: FD (production date): Z-Number: MAC-Address: WiFi SSID: IPv4-Address: IPv6-Address:	See the information on the display.	Displays information about your appliance.

**14 Refrigerator compart-
ment**

You can keep dairy products, eggs, prepared meals, pastries, open pre- serves and hard cheese in the refri- gerator compartment.
The temperature can be set from 2 °C (46 °F) to 8 °C (36 °F).
The refrigerator compartment can also be used to store highly perish- able foods in the short to medium

term. The lower the selected temper- ature, the longer the food remains fresh.

**14.1 Tips for storing food in
the refrigerator compart-
ment**

- Only store food when fresh and undamaged.
- Store food covered or in air-tight packaging.

- To avoid impeding the circulation of air and to prevent food from freezing, do not place food in front of the inner ventilation openings or in direct contact with the back wall.
- Allow hot food and drinks to cool down first before placing in the appliance.
- Observe the best-before date or use-by date specified by the manufacturer.

14.2 Chill zones in the refrigerator compartment

The air recirculation cooling system allows the air to circulate evenly in the refrigerator compartment and ensures a constant temperature at all shelves.

Coldest zone

The coldest zone is in the bottom area at the back panel.

Tip: Store highly perishable food such as fish, sausages and meat in the cold storage compartment.

→ "Cold storage compartment",
Page 64

15 Cold storage compartment

In the cold storage compartment, you can keep food fresh for up to three times longer than in the refrigerator compartment.

The temperature can be set from 0°C (32°F) to 3°C (37°F) using pre-defined storage settings.

The low temperature and optimal humidity in the cold storage compartment ensure ideal storage conditions for perishable foods.

15.1 Storage recommendations for the cold storage compartment

Storage setting	Food
 Fruit & Vegetables	Mixed load with fruit and vegetables
 Fruit	Fruit
 Vegetables	Vegetables
 Meat	Meat
 Fish	Fish and Seafood
 Beverages	Drinks
 Cold cuts/Sausages	Cold cuts and sausage products
 Cheese	Cheese and dairy products
 Mixed load	Mixed load

Tip: Fruit, vegetables, drinks and snacks may freeze below 0 °C (32 °F).

Use the  and  storage settings for "Meat" and "Fish" only.

15.2 Storage times in the cold storage compartment at 0 °C (32 °F)

The storage times are dependent on the original quality of your food.

Food	Storage time
Fresh fish, seafood	up to 3 days
Poultry, meat (boiled/fried)	up to 5 days
Beef, pork, lamb, sausage (cold meat)	up to 7 days
Smoked fish, broccoli	up to 14 days
Salad greens, fennel, apricots, plums	up to 21 days

Food	Storage time
Soft cheese, yoghurt, quark, buttermilk, cauliflower	up to 30 days

16 Freezer compartment

You can store frozen food, freeze food and make ice cubes in the freezer compartment.

The temperature can be set from -16°C (3°F) to -24°C (-11°F).

Long-term storage of food should be at -18°C (0°F) or lower.

To protect foods from freezer burn, a permanent temperature setting of -24°C (-11°F) is possible.

To protect fatty foods such as fish and meat from oxidation, a permanent temperature setting of -24°C (-11°F) is possible.

💡 lights up from a freezer compartment temperature of -24°C (-11°F).

The freezer compartment can be used to store perishable food long-term. The low temperatures slow down or stop the spoilage.

16.1 Freezing capacity

The freezing capacity indicates the quantity of food that can be frozen right through to the centre within a specific period of time.

Information on freezing capacity can be found on the rating plate.

→ "Appliance", Fig. **1/16** Page 49

Prerequisites for freezing capacity

1. Approx. 24 hours before storing fresh food in the appliance, switch on Fast freezing.
2. Store the food in the frozen food pull-out container first.

16.2 Fully utilising the freezer compartment volume

Learn how to store the maximum amount of frozen food in the freezer compartment.

1. Remove all fittings from the freezer compartment. → Page 69
2. Stack the food directly on the shelves and on the floor of the freezer compartment.

16.3 Tips for storing food in the freezer compartment

- Store food in air-tight packaging.
- Do not bring food which is to be frozen into contact with frozen food.
- Distribute the food over a wide area in the suspended frozen food container.

16.4 Tips for freezing fresh food

- Freeze fresh and undamaged food only.
- Freeze food in portions.
- Cooked food is more suitable than food that can be eaten raw.
- Vegetables: Wash, chop up and blanch before freezing.
- Fruit: Wash, pit and perhaps peel, possibly add sugar or ascorbic acid solution.
- Food that is suitable for freezing includes baked items, fish and seafood, meat, game, poultry, eggs without shells, cheese, butter and quark, ready meals and leftovers.
- Food that is unsuitable for freezing includes lettuce, radishes, eggs in shells, grapes, raw apples and pears, yoghurt, sour cream, crème fraîche and mayonnaise.

Packing frozen food

If you select suitable packaging material and the correct type of packaging, you can determine the product quality and prevent freezer burn.

1. Place the food in the packaging.
2. Squeeze out the air.
3. Pack food airtight to prevent it from losing flavour and drying out.
4. Label the packaging with the contents and the date of freezing.

16.5 Shelf life of frozen food at -18 °C (0 °F)

Food	Storage time
Fish, sausages, prepared meals and baked goods	up to 6 months
Poultry, meat	up to 8 months
Vegetables, fruit	up to 12 months

16.6 Defrosting methods for frozen food

⚠ CAUTION

Risk of harm to health!

During the thawing process, bacteria may multiply and spoil the frozen food.

- ▶ Do not refreeze food after it has been defrosted or started to defrost.
- ▶ Refreeze food only after cooking.
- ▶ These items should no longer be stored for the maximum storage period.
- Defrost animal-based food, such as fish, meat, cheese, quark, in the refrigerator compartment.
- Defrost bread at room temperature.

- Prepare food for immediate consumption in the microwave, in the oven, or on the hob.

17 Water system

Your appliance is equipped with water-carrying components.

The water system only works if a water filter or a bypass cap is installed. Switch off ice cube production before disconnecting the appliance from the drinking water connection.

→ Page 67

17.1 Bypass cap

The bypass cap filters only large particles out of the water and can be cleaned as required.


Note: The bypass cap does not filter bacteria or microbes out of the water.

Tip: If you want to reduce other contaminants, e.g. chloramines, lead and pharmaceutical products, and you have not installed an external water filter system, you can replace the bypass cap with a water filter.


A new water filter can be purchased from our customer service, your dealer or our website.

Replacing the bypass cap with a water filter

1. Hinge the filter cover upwards.

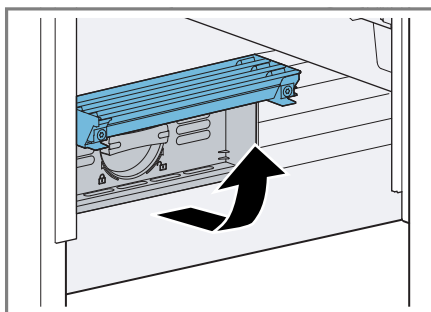

2. Turn the bypass cap anti-clockwise by 90° ① and remove it ②.
 - ▶ Remove the bypass cap with care as it is under pressure.

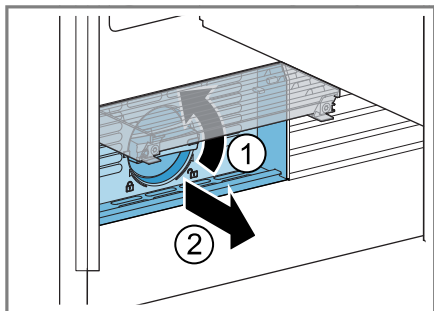

Notes

- When removing it, a small amount of water may drip out of the bypass cap. Remove the drips of water with a dry cloth.
 - You can dispose of the used bypass cap with your household waste.
3. Insert the water filter in the filter opening as far as it will go and turn it 90° clockwise.
 4. Close the filter cover.
 5. Discard the ice cubes produced during the first 24 hours, and dispense water for five minutes and then dispose of this.

17.2 Ice cube maker

Use the different functions of the ice cube maker to produce ice cubes.

⚠ WARNING

Risk of injury!

Rotating parts may cause injury.

- ▶ Never reach into or underneath the ice cube maker.

❄ Standard production	Ice cube production
-----------------------	---------------------

Note: The ice cube maker automatically detects that the ice storage con-

tainer is full and stops producing ice cubes.

It may take up to 48 hours until the ice storage container is full.

Tip: If the ice cubes taste stale, dispose of the remaining ice cubes and the cubes produced over the next 24 hours. If the ice cubes still taste stale, change the water filter.

Putting the ice cube maker into operation

Notes

- Ice cube production starts as soon as the appliance is switched on and the freezer compartment has reached the set temperature.
- As soon as the freezer compartment reaches the set temperature, the first batch of ice cubes will be ready in approximately 4 hours.

Requirement: The appliance is connected to the drinking water connection.

- ▶ For hygiene reasons, discard the ice cubes produced within the first 24 hours.

Switching on ice cube production

1. Touch the ice cube maker setting.
2. Swipe to ❄.

Switching off ice cube production

1. Touch the ice cube maker setting.
2. Swipe to ❄.

18 Defrosting

18.1 Defrosting in the refrigerator compartment

The refrigerator compartment in your appliance defrosts automatically.

18.2 Defrosting in the cold storage compartment

The cold storage compartment in your appliance defrosts automatically.

18.3 Defrosting in the freezer compartment

The fully automatic NoFrost system ensures that the freezer compartment remains frost-free. Defrosting is not required.

19 Cleaning and servicing

Customer Service must clean inaccessible points. Cleaning by customer service can give rise to costs.

19.1 Care instructions for stainless steel surfaces

When taking care of and cleaning stainless steel surfaces, use only cleaning cloths and cleaning agents suitable for stainless steel.

Tips

- To prevent visible scratches, wipe the stainless steel surface in the direction of the grain.
- Suitable cleaning agents and cleaning cloths are available from our customer service, your dealer or on our website.

19.2 Preparing the appliance for cleaning

1. Switch off the appliance.
2. Disconnect the appliance from the power supply.
Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

3. Take out all of the food and store it in a cool place.
Place ice packs (if available) onto the food.
4. Remove all fittings and accessories from the appliance.
→ *Page 69*

19.3 Cleaning the appliance

WARNING

Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

Liquid in the lighting or in the controls can be dangerous.

ATTENTION

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discoloured.

- ▶ Never clean fittings and accessory in the dishwasher.

1. Prepare the appliance for cleaning.
→ *Page 68*
2. Clean the appliance, the fittings, the accessories and the door seals with a dish cloth, lukewarm water and a little pH-neutral washing-up liquid.
3. Dry thoroughly with a soft, dry cloth.
4. Insert the fittings.

5. Electrically connect the appliance.
→ Page 10
6. Switch on the appliance.
7. Putting the food into the appliance.

19.4 Cleaning the camera


If the temperature or the air humidity changes, this may cause the camera lenses to steam up.

1. Clean the camera with a microfibre cloth.
2. Clean the camera lenses with a microfibre cloth and a commercially available rain deflector.

19.5 Cleaning the bypass cap

Tip: Clean the bypass cap once a year.

1. Turn the rotary knob on the bypass cap anti-clockwise by 90° and remove the bypass cap.
2. Remove the filter from the bypass cap ① and clean it under running water ②.

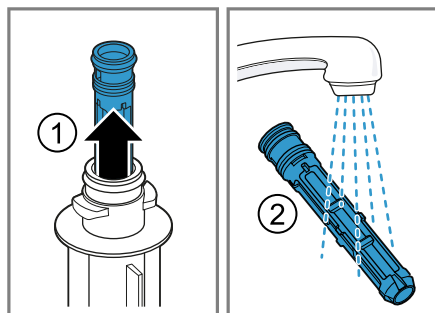


3. Reinsert the filter in the bypass cap.
4. Insert the bypass cap vertically into the filter opening as far as it will go and turn the rotary knob 90° clockwise as far as it will go.

19.6 Removing the fittings

If you want to clean the fittings thoroughly, remove these from your appliance.


Removing the shelf

- Lift the shelf ① and remove it ②.

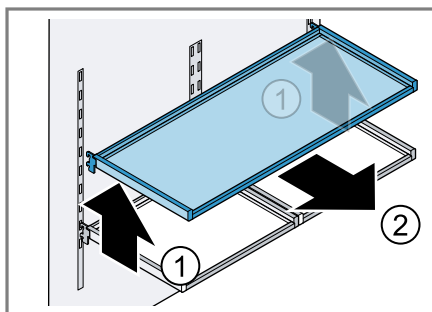

Removing door tray


- Lift the door tray and remove it.

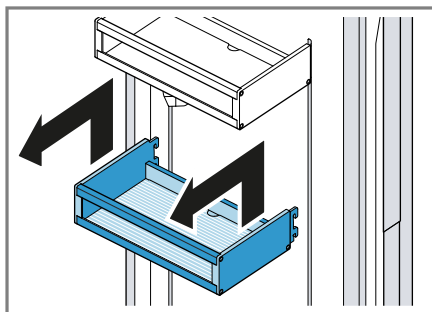

Removing the storage container


1. Pull out the storage container as far as it will go.
2. Underneath the storage container on both sides, press the pull-out

rail lock outwards ① and remove the storage container ②.

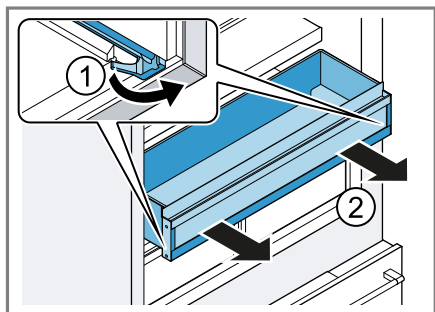


Removing the cold storage container

1. Pull out the cold storage container as far as it will go.
2. Underneath the cold storage container on both sides, press the pull-out rail lock outwards ① and remove the cold storage container ②.

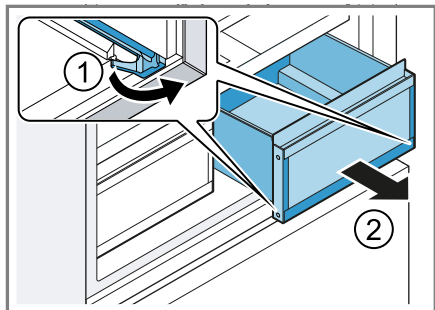


Removing the ice storage container

1. Pull out the frozen food pull-out container as far as it will go.
2. Lift the ice cube container at the front and remove it.

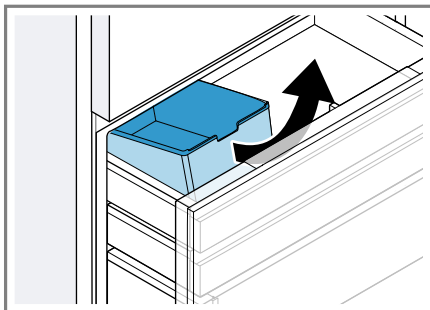

19.7 Replacing the odour filter

1. Remove the odour filter holder.
2. Take the used odour filter out of the odour filter holder and replace it with the new odour filter.

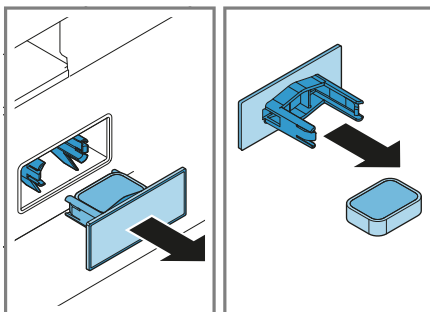

Note: A new odour filter can be purchased from our customer service or our website.

20 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

 WARNING
Risk of electric shock!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.

Fault	Cause and troubleshooting
The appliance is not cooling, the displays and lighting are lit.	Showroom mode is switched on. 1. Swipe to "Settings". 2. Swipe to ☺ "Advanced". 3. Touch "Demo mode" ⏻.
The LED lighting does not work.	Different causes are possible. ▶ Call customer service. The customer service number can be found in the enclosed customer service directory.
The refrigeration unit is switching on more frequently and for longer.	The appliance has been opened frequently. ▶ Do not open appliance door unnecessarily. External ventilation openings are covered up. ▶ Remove any obstructions from in front of the external ventilation openings. Not a fault. Modern refrigeration machines switch on more frequently and have different power levels to cool more efficiently.  ▶ Remove any obstructions from in front of the external ventilation openings. ▶ Install the appliance as far away as possible from heating elements, cookers and other heat sources. Avoid prolonged exposure of the appliance to direct sunlight. ▶ Only open the appliance door as briefly as necessary. ▶ Allow hot food and drinks to cool down first before storing in the appliance.

Fault	Cause and troubleshooting
A layer of frost forms on the back wall of the refrigerator compartment.	Not a fault. Modern refrigeration machines ensure a more even temperature in the refrigerator compartment. The back wall of the refrigerator compartment is defrosted automatically at regular intervals.  ▶ Only open the appliance door as briefly as necessary. ▶ Pack the food airtight or cover it. ▶ Allow hot food and drinks to cool down first before storing in the appliance. ▶ Always leave some space between the food and the interior walls.
Home Connect is not working properly.	Different causes are possible. ▶ Go to www.home-connect.com.
The cameras do not take any photos.	The cameras are not activated in Home Connect. ▶ Activate the cameras. Cameras are not calibrated. 1. Switch off the appliance. 2. Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. Reconnect the appliance after five minutes. 4. Use the main switch to switch the appliance on. → "Appliance", Fig. 1 13 <i>Page 49</i> 5. Close the appliance doors and wait for 3 minutes. 6. If the fault persists, call customer service. The customer service number can be found in the enclosed customer service directory.
Cameras take blurred photos.	The appliance door was closed too quickly. ▶ Close the appliance door slowly. Camera lenses are misted up. The appliance door was left open for too long. 1. Clean the cameras. → <i>Page 69</i> 2. Do not leave the appliance door open for too long. The anti-mist film is damaged. ▶ Call customer service. The customer service number can be found in the enclosed customer service directory.

Fault	Cause and troubleshooting
Photos are missing, are not cropped or show an incorrect angle.	Cameras are not calibrated. 1. Switch off the appliance. 2. Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. Reconnect the appliance after five minutes. 4. Use the main switch to switch the appliance on. → "Appliance", Fig. 1/13 Page 49 5. Close the appliance doors and wait for 3 minutes. 6. If the fault persists, call customer service. The customer service number can be found in the enclosed customer service directory.
Message showing "D" or "E" appears in the display.	The electronics have detected a fault. 1. Switch off the appliance. 2. Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. Reconnect the appliance after five minutes. 4. If the message still appears on the display, call Customer Service. The customer service number can be found in the enclosed customer service directory.
A warning tone sounds and "Door alarm cooling compartment" appears. The door alarm is switched on.	The appliance door is open. ► Close the appliance door.
A warning tone sounds and "Door alarm freezer compartment" appears. The door alarm is switched on.	The appliance door is open. ► Close the appliance door.
A warning signal sounds and "Temperature alarm" lights up. The temperature alarm is switched on.	Different causes are possible. 1. Touch ✓. ✓ The alarm is switched off. 2. After several hours, check whether the set freezer compartment temperature has been reached again. Larger quantities of fresh food have been put in. ► Do not exceed the max. freezing capacity. → "Freezing capacity", Page 65

Fault	Cause and troubleshooting
The temperature differs greatly from the setting.	Different causes are possible. 1. Switch off the appliance. 2. Switch the appliance back on after five minutes. ▶ If the temperature is too warm, check the temperature again after a couple of hours. ▶ If the temperature is too cold, check the temperature again on the following day.
Water is leaking out of the appliance.	The water connection or water hose is not leak-tight. ▶ Check if the water connections are fastened firmly and the water hose is undamaged. If necessary, replace the water hose.
Ice cube production is low.	The appliance has only recently been connected. ▶ Wait approximately four hours until the first batch of ice cubes is ready. The freezer compartment has been opened frequently or for an extended period of time. ▶ Check ice cube production after a few hours. Low water pressure. ▶ Check the water pressure of the water supply system or the external water filter system, e.g. reverse osmosis system. Connect the appliance only to a water connection with sufficient water pressure. → <i>Page 45</i> The bypass cap is blocked. ▶ Clean the bypass cap. → <i>Page 69</i> Food or objects are blocking the fill level sensor for the ice cube maker. ▶ Remove all food and objects from the ice storage container. Fault in the ice cube maker. 1. Switch off the appliance. 2. Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. Reconnect the appliance after five minutes. 4. If the fault persists, call customer service. The customer service number can be found in the enclosed customer service directory.
The ice cube maker is not functioning.	Ice cube production is switched off. ▶ Switch on ice cube production. → <i>Page 67</i>

Fault	Cause and troubleshooting
The ice cube maker is not functioning.	There is no water supply. ▶ Ensure that there is a water supply and that the corner valve on the water connection is open. Contact an installer if necessary. Kink in the water hose. ▶ Turn off the water supply and straighten the kink in water hose. If necessary, replace the water hose. Fault in the ice cube maker. 1. Switch off the appliance. 2. Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. Reconnect the appliance after five minutes. 4. If the fault persists, call customer service. The customer service number can be found in the enclosed customer service directory.
The appliance hums, bubbles, buzzes, gargles, clicks, crackles or rumbles.	Not a fault. A motor is running, e.g. refrigerating unit, fan. Refrigerant flows through the pipes. The motor, switches, solenoid valves or water valves are switching on or off. Automatic defrosting is running. Ice cubes fall into the ice storage container. No action required.
The appliance makes noises. 	The appliance is not level. ▶ Align the appliance using a spirit level and the screw feet. Fittings wobble or stick. ▶ Check the removable fittings and, if required, replace these. Bottles or containers are touching. ▶ Move the bottles or containers away from each other. Fast freezing is switched on. No action required.

20.1 Power failure

During a power failure, the temperature in the appliance rises; this reduces the storage time and the quality of the frozen food. On the website for your appliance, the technical data provides you with

the storage times for frozen food in the event of a fault.

Notes

- Open the appliance as little as possible during a power failure and do not place any other food in the appliance.

- Check the quality of the food immediately after a power failure.
 - Dispose of any frozen food that has defrosted and is hotter than 5 °C.
 - Cook or fry slightly thawed frozen food, and then either consume it or freeze it again.

21 Storage and disposal

21.1 Taking the appliance out of operation

1. Switch off the appliance.
2. Disconnect the appliance from the power supply.
Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
3. Disconnect the appliance from the drinking water connection.
4. Remove all of the food.
5. Clean the appliance. → *Page 68*
6. To guarantee the ventilation inside the appliance, leave the appliance open.

21.2 Disposing of old appliance

Valuable raw materials can be re-used by recycling.

WARNING

Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Leave shelves and containers inside the appliance to prevent children from climbing in.
- ▶ Keep children away from the redundant appliance.

WARNING

Risk of fire!

If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- ▶ Do not damage the tubes of the refrigerant circuit or the insulation.
1. Unplug the appliance from the mains.
 2. Cut through the power cord.
 3. Dispose of the appliance in an environmentally friendly manner.
Information about current disposal methods are available from your specialist dealer or local authority.

22 Customer Service

Function-relevant genuine spare parts according to the corresponding Eco-design Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

22.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.), which you can find on the appliance's rating plate.

→ "Appliance", Fig. **1**/16 Page 49

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

23 Technical data

Refrigerant, cubic capacity and further technical specifications can be found on the rating plate.

→ "Appliance", Fig. **1**/16 Page 49

This product contains a light source from energy efficiency class E. The light source is available as a spare part and should only be replaced by trained specialist staff.

This product contains a second light source from energy efficiency class E. The light source is available as a spare part and should only be replaced by trained specialist staff.

This product contains a third light source from energy efficiency class E. The light source is available as a spare part and should only be replaced by trained specialist staff.

You can find more information about your model online at <https://eprel.ec.europa.eu/>¹. This web address is linked to the official EU

EPREL product database. Please then follow the instructions on searching for the model. The model identifier is made up of the characters before the slash in the product number (E-Nr.) on the rating plate. Alternatively, you can also find the model identifier in the first line of the EU energy label.

23.1 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free software or open source software.

The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your

Home Connect app: "Profile -> Legal information -> Licence Information".²

You can also download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from oss-request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

The relevant source code will be made available on request.

Please send your request to oss-request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.

Subject: „OSSREQUEST“

The cost of performing your request will be charged to you. This offer is

¹ Only applies to countries in the European Economic Area

² Depending on the appliance specifications

valid for three years from the date of purchase or at least as long as we

offer support and spare parts for the relevant appliance.

24 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at www.gaggenau.com among the additional documents on the product page for your appliance.



2.4 GHz band (2400–2483.5 MHz): Max. 100 mW

5-GHz band (5150–5350 MHz + 5470–5725 MHz): max. 150 mW



BE	BG	CZ	DK	DE	EE	IE	EL	ES
FR	HR	IT	CY	LI	LV	LT	LU	HU
MT	NL	AT	PL	PT	RO	SI	SK	FI
SE	NO	CH	TR	IS	UK (NI)			

5 GHz WLAN (Wi-Fi): For indoor use only.

AL	BA	MD	ME	MK	RS	UK	UA
----	----	----	----	----	----	----	----

5 GHz WLAN (Wi-Fi): For indoor use only.



A series of horizontal lines for writing, starting with a solid line and followed by alternating solid and dashed lines.

The difference is Gaggenau

gaggenau.com

BSH Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München, GERMANY
www.gaggenau.com



9001915968 (051106)
he, en